



Manual - EV Charging Station NS

Table of Contents

1. Safety Instructions	1
2. Description and features	2
2.1. Description	2
2.2. Features	2
2.3. What's in the box?	4
3. Installation	5
4. System example	7
5. Setup, configuration & operation	8
5.1. First use setup via VictronConnect	8
5.2. First use setup via WiFi access point	11
5.3. MQTT activation	15
5.3.1. Activate pairing mode	16
5.3.2. Pairing via EVCS web interface	16
5.3.3. Pairing via VictronConnect	18
5.4. GX device setup, configuration and operation	22
5.4.1. Setup menu and options	22
5.5. VictronConnect setup, configuration and operation	23
5.5.1. Setup	23
5.5.2. Overview page	24
5.5.3. Settings page	24
5.5.4. Product info page	25
5.5.5. Network Settings	26
5.5.6. General Settings	27
5.5.7. Scheduler	31
5.5.8. Light Ring	33
5.5.9. Access	33
5.5.10. Reset to defaults	34
5.6. Firmware updates	34
5.7. Reset to factory defaults and password recovery	35
5.8. Maintenance	36
6. Troubleshooting	37
6.1. CP Line Calibration	37
6.2. MQTT pairing	38
6.3. Frequently asked questions	38
6.3.1. Q1: How do I prevent the charging station from being used by unauthorised persons?	38
6.3.2. Q2: Does the EV Charging Station have RFID?	38
6.3.3. Q3: The light ring is annoying my neighbours during night, how can I disable the light ring?	38
6.3.4. Q4: Why isn't my car recognized when I connect the charging cable?	38
6.3.5. Q5: Why does my EV Charging Station show up on multiple GX devices?	38
6.3.6. Q6: How much PV power do I need at least to charge the EV in automatic mode?	39
6.3.7. Q7: Is it possible to operate multiple EV Charging Stations in one system?	39
6.3.8. Q8: The EV is fully charged, but the EVCS still alternates between start charging and stop charging, why?	39
6.3.9. Q9: I keep getting a W-104 GX communication warning! What is the reason for this?	39
6.3.10. Q10: Is a GX device in the system absolutely necessary?	39
6.3.11. Q11: I would like to control the EVCS via Modbus TCP. Is this possible and if so, how?	39
6.4. EVCS Notification, Warning, Alarm and Error Codes	40
7. Technical specification	43
7.1. Dimensions	44
7.2. Drilling template	45
8. Appendix	46
8.1. External control of grid-relevant power (§14a EnWG - Germany)	46
8.2. Modbus TCP activation	46
8.3. EV Charging Station setup web interface	48

8.3.1. The main page	51
8.3.2. Networks menu	52
8.3.3. Access menu	53

1. Safety Instructions

Please read the safety instructions below before using the EV Charging Station NS to avoid risks of fire, electric shocks, personal injuries or equipment damage.

Installation and adjustments must be made by qualified personnel only. To reduce the risk of electric shock, do not perform any servicing other than that specified in the operating instructions unless you are qualified to do so.

For electrical work, follow the local national wiring standard, regulation and these installation instructions. Connection to the mains supply must be in accordance with the national regulations for electrical installations.

This product is designed and tested in accordance with international standards. The equipment should be used for its designated application only and in accordance with the specified operating parameters.

Warnings and cautions:



- Never install near fire sources, explosive materials, combustibles or other flammable sources. Never use it at places where gas or other chemical explosions could occur.
- It must be connected all the times to the ground, otherwise it will not allow charging.
- Turn off the EV Charging Station NS power before installing or performing operations to it.
- Make sure children are supervised if using the equipment.
- Do not put fingers or insert objects or sharp metallic objects into the terminals. Do not insert objects into any other parts of the EV Charging Station NS.
- Do not use the device if the power cord or EV cable is broken, shows any signs of damage or does not function properly.
- Do not use the EV Charging Station NS if it is broken, defective, cracked, damaged or does not function properly.
- Do not apply strong force on the equipment, to prevent crashes and deterioration.
- Do not use any sharp objects to damage the product.
- Do not service the equipment by yourself, do not open, disassemble or make any modifications to it. Contact your Victron Energy Distributor.
- Do not touch any live electrical parts.
- Do not place the EV cables connected to the charging station in water.
- Make sure ground connection is properly done to prevent equipment damage.
- Transport the device with care in its original package to avoid damage to it and its components.
- Store in a dry environment, at temperatures between -20°C to 60°C .
- Do not operate at temperatures outside the operating range of -25°C to 50°C .
- As the EV Charging Station NS can affect the functioning of certain medical electronic implants, check any potential side effects with your electronic device manufacturer before using the device.

2. Description and features

2.1. Description

The EV Charging Station NS is an AC charging station for electric vehicles. It delivers up to 22 kW in three-phase mode or 7.3 kW in single-phase mode, with a configurable charging current of up to 32 A per phase.

The charging station connects to the local network over WiFi. It is operated and monitored with the VictronConnect app over Bluetooth, in its own web interface, from a GX device, and from anywhere through the VRM portal and VictronConnect-Remote.

In a system with solar, the charging station can charge the vehicle from surplus solar energy once the house batteries are full and feed-in is active, instead of exporting that energy to the grid at a lower price.

A programmable RGB light ring around the charging port shows the state of the charging station, with 55 configurable light effects.

The tough plastic enclosure withstands harsh weather and can be mounted indoors or outdoors. The default cover is blue; black and white covers are sold separately.

2.2. Features

Three operation modes:

1. Automatic mode to ensure maximum PV system efficiency

Thanks to the seamless integration of the EV Charging Station NS with the rest of the Victron installation, it detects when there is a surplus of solar power and uses this exclusively to charge the vehicle or, if desired, adds energy from the grid to cover the minimum power requirement, for example, if there is not enough surplus solar power. Note that this mode requires a GX device in your system and communication between GX device and EVCS enabled. For details, see chapter [VictronConnect setup, configuration and operation \[23\]](#) and [GX device setup, configuration and operation \[22\]](#).

Instead of losing surplus energy when the batteries are full and, for example, feeding it back into the grid at a lower price, the energy is stored in the EV battery.

- Seamless integration into the Victron installation
- Detects when excess power is available and uses only that to charge the vehicle before exporting it to the grid
- Ensures maximum PV efficiency
- Battery-powered algorithm (used by default) for automatic mode ensures that automatic mode works even when off-grid

How does it work?

The EVCS will automatically start charging when the vehicle is connected and the following conditions are met:

1. The current state of charge is above the 'Start charging at backup battery SoC (%)' value.
2. There is enough excess solar power available, with excess solar power calculated as follows:
 - $\text{Excess solar power} = \text{Total PV production} - \text{AC loads (without car consumption)} = 1380\text{W} (230\text{V} \times 6\text{A})$

In the example above, the Min. charge current (from 6A) value has been set to 6A. The required excess solar power increases accordingly if a higher value is set for the Min. charge current (from 6A). Please see the chapter [VictronConnect setup, configuration and operation \[23\]](#) for details on both parameters.
3. Or, if there is not enough excess solar power available to meet the minimum charge current requirement as per 2., it is possible to enable the 'Allow low excess solar power for auto mode' option. This option supplements the required power with additional power from the grid to meet the minimum current requirement. See chapter [VictronConnect setup, configuration and operation \[23\]](#) for details.

2. Manual mode to configure output current

Manual mode allows configurable output current between 6-32A.

The charging power is controlled in several ways:

- By using the web interface via a web browser
- From a GX device touch screen like the [GX Touch 50 & GX Touch 70](#).
- From the Remote Console
- By using the Controls on the Dashboard of the VRM Portal (requires a GX device)

- Via Bluetooth and the VictronConnect App

It allows charging to be started or stopped manually when an EV is connected to the charging station, regardless of PV production.

3. Scheduled mode to allow automatic charging at custom time intervals

The Scheduler allows charging at different time intervals, for example at certain times during the night when grid energy is cheaper.

In addition to the start and end time, various parameters such as charging current and interval can be defined.

The EVCS will then start charging according to the scheduler settings.

WiFi Communication WiFi 802.11 b/g/n for configuration, control and monitoring

The internal WiFi module can be configured in Access Point mode or Station mode, for first setup, control and monitoring.

Bluetooth communication via VictronConnect

Integrated Bluetooth capability enables easy monitoring and control of the EV Charging Station NS via [VictronConnect](#) from any mobile device such as an iPhone, iPad or Android phone.

For more details see the [VictronConnect setup, configuration and operation \[23\]](#) chapter.

Integration with GX devices

Control and monitor the EV Charging Station NS from a GX device such as the [Cerbo GX](#) and the Remote Console.


For more details see the [GX device setup, configuration and operation \[22\]](#) chapter.

Integration with VRM

Several options are available in the VRM Portal:

- Real-time reports
- Custom reports for configurable time periods
- Advanced functions such as remote firmware updates
- Change mode and charge current via Dashboard Controls on the VRM Portal and start/stop charging
- Access the EVCS web interface from VRM via a proxy link by clicking 'Control Panel' in the Device list

Control and monitoring are also possible via VRM App (download from the App Store or Google Play) and [VRM App Widgets](#) directly from the home screen of a mobile device.

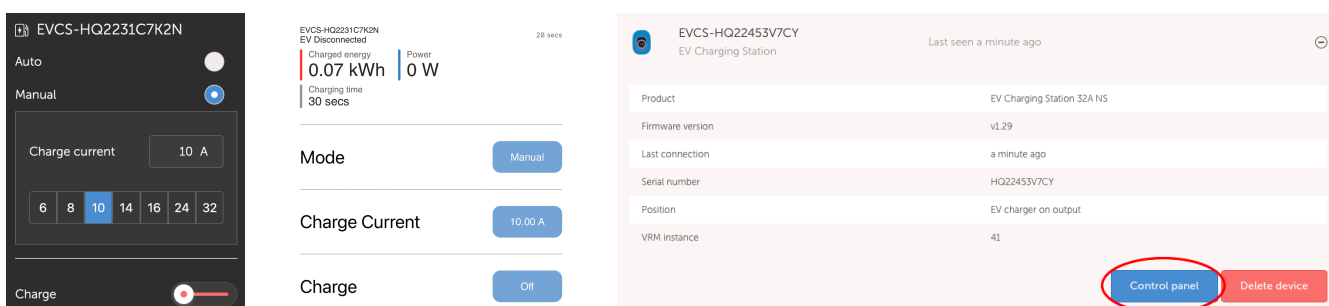

For detailed information, see the [VRM Portal documentation](#).

Light Ring for fast viewing the device state

It also has a fully programmable RGB light ring around the charging port, which can be used to quickly determine the status of the device even from a distance. It can be programmed via the web interface to display different light effects depending on the current state (disconnected, charged, loaded, etc.).

2.3. What's in the box?

- EV Charging Station NS
- Mounting plate
- 28mm nylon cable gland for power cables up to 19mm in diameter
- Type 2 cable plug holder dummy socket
- Rubber plug

3. Installation

This product may only be installed by qualified personnel (licensed electrician).

It is suitable for wall mounting or pole mounting (vertical surface). In all cases, the surface should be solid and flat.

Precautionary measures




- Ensure that the AC input is protected by a fuse or magnetic circuit breaker rated at 40A or less. The cable cross-section must be sized accordingly. If the AC input supply is rated at a lower value, the fuse or magnetic circuit breaker should be sized accordingly.
- An external RCD is required.
- We recommend using an RCD type B protected supply (check local legislation) . Make sure that the RCD corresponds to the maximum power used, i.e. use a 40A RCD type B if you charge mostly with 22kW or correspondingly smaller if you charge with less power
- Recommended cable cross-section is 6mm² / AWG 10.
- Inside the device is a sticker with the model, serial number, WiFi password and, depending on the date of manufacture, the unique Bluetooth pairing code. Note the password and pairing code on the internal label for future reference. This initial password can be used for both logging in on the web page but also for WiFi connection.
- The tightening force of the screws on the backing plate should be 1-1.2 Nm.
- The mounting surface should be solid and flat.
- Make sure you always have the latest version of this manual, which is updated regularly and available on the [EV Charging Station](#) website.


Installation steps:

1. Decide whether the power cable should be routed from the bottom or from the rear into the charging station.
2. Remove the blue cover (2 screws at the bottom) from the charging station.
3. Mark the wall where it should be mounted using the supplied wall plate or the [drilling template \[45\]](#) in the appendix.
4. Drill 3 holes with wall plugs ready for installation, see the drilling template in the appendix.
5. Measure a suitable location and drill through the wall for the cable (when main supply cable comes from inside the building). Note that if the cable is fed into the charging station from the rear instead of the bottom, the hole will match the drilling template.
6. Depending on whether the cable is routed from below or from behind, knock out the appropriate hole for the nylon gland with a screwdriver or use a 28mm drill and insert the nylon gland. If the cable is routed from the rear, attach the supplied rubber plug instead and pierce a hole slightly smaller than the power cable into it to make a watertight connection.
7. Label each individual cable and pass it through the wall, the nylon gland (or the rubber plug), the grommet and into the charging station.
8. Terminate the cable ends with ferrules and connect to the relevant points.
9. If this is a single-phase installation, use L1, neutral and earth connections.
10. Tighten the nylon gland if installed from the bottom.
11. Hang the device over the wall plate and fix it with the two screws from inside the device.
12. Attach the blue cover and fix it with the 2 screws from the bottom side. Make sure it is firmly seated.

Watch this video for an installation example:

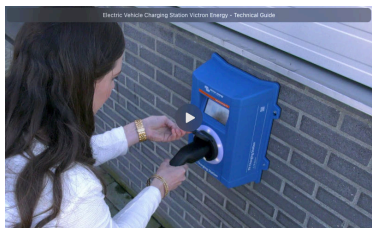

4. System example

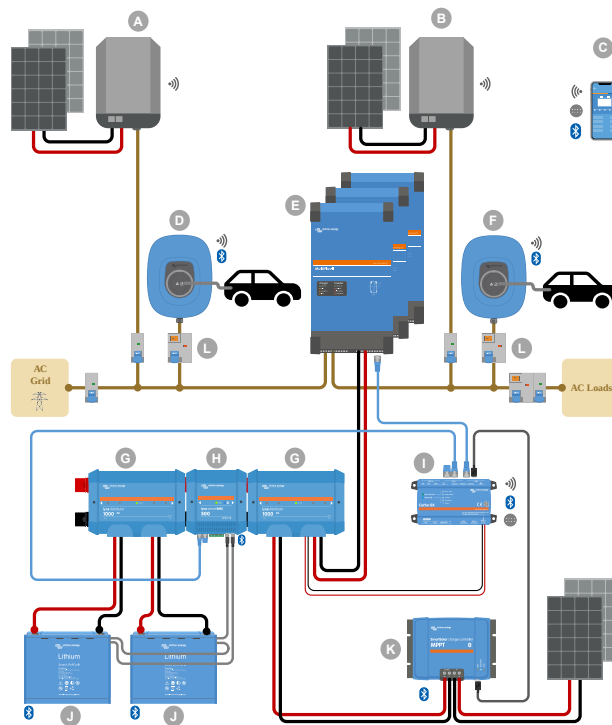

This system displays all available options, specifically:

- All solar types: AC PV on AC input, AC PV on AC output and DC PV
- EV Charging Station NS on AC input or AC output of the inverter/charger
- Single-phase or three-phase

Key	Description
A	Grid-feed PV Inverter connected to the AC input of the inverter/charger
B	Grid-feed PV Inverter connected to the AC output of the inverter/charger
C	Setup, control and monitoring via WiFi or Bluetooth and VictronConnect , web interface or VRM portal (setup only via WiFi or Bluetooth)
D	EV Charging Station NS: Connected to the AC input of the inverter/charger
E	For single-phase systems: a single inverter/charger or inverters/chargers connected in parallel For three-phase systems: three inverter/chargers connected in 3-phase or multiple strings of paralleled units connected in 3-phase
F	EV Charging Station NS: Connected to the AC output of the inverter/charger
G	Lynx Distributor : On the battery side and on the system side, containing a positive and negative bus bar and all DC fuses
H	Lynx Smart BMS : Monitors and controls (with built-in battery monitor and contactor) the Victron Smart Lithium batteries and Lynx Distributor fuses
I	Cerbo GX : Serves as a control and communication center and enables remote control and monitoring via the VRM portal and/or the VRM App Widgets , accessible directly from a mobile device
J	Victron Lithium Battery Smart : Available in 12.8V & 25.6V and different capacities. A maximum energy storage capacity of 102kWh can be achieved by combining batteries in both series and parallel configurations
K	Solar Charge Controller : A variety of MPPT solar charge controllers are available with voltage ranges from 75V to 450V, allowing for topping up of energy storage and storage of surplus energy in the vehicle's battery
L	Dedicated RCD type B (40A for charging at 22kW) on the EV charger input


5. Setup, configuration & operation

5.1. First use setup via VictronConnect

The initial setup is required when the EVCS is new and has yet to be configured or after it has been reset to factory defaults.

Preparation

1. Open VictronConnect and find the entry for your EVCS (EVCS-HQXXXXXXXXXX).
2. Tap on EVCS. This will start the pairing dialogue. Enter the pairing code which is either 000000 or a unique number on a sticker inside the housing.

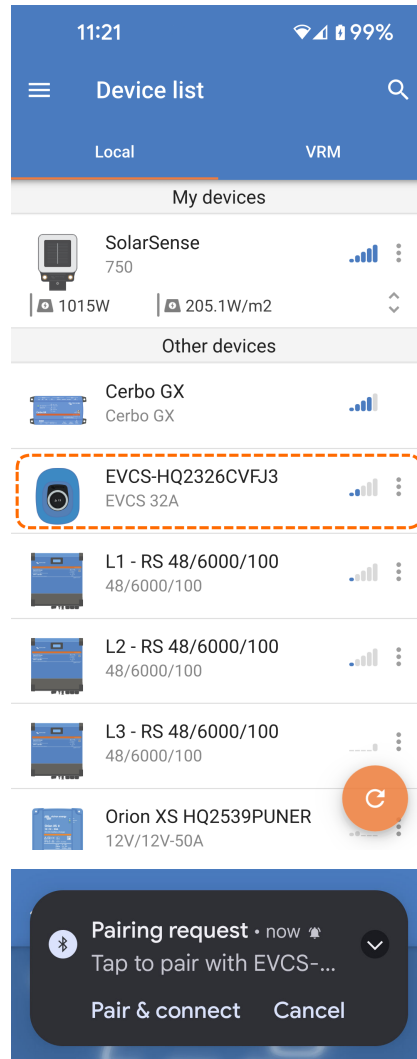


Start initial setup

If the pairing was successful, the status page would appear.

A warning notification will pop up stating "Initial setup not completed".

Tap the cog wheel icon in the upper right to open the Settings page so that the initial setup can be performed.

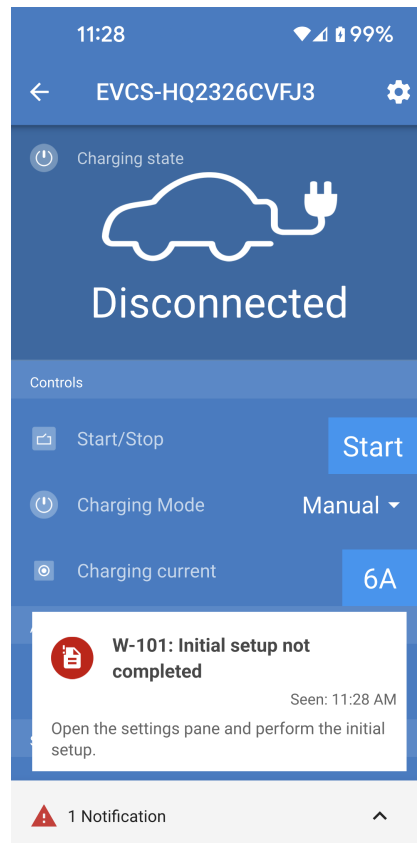

Step 1 of 3: Configure WiFi access

One of the following parameters **must** be changed to complete the first setup and start using the EV:

- Either confirm the WiFi mode AP (the EVCS provides its own access point) - all necessary parameters are already pre-filled. The AP passphrase corresponds to the password as stated on the sticker inside the EVCS.
- Or choose Station mode to connect the EVCS to your local network/router. If you already know the network name (SSID), you can enter it manually. Alternatively, hit SCAN to find nearby networks, select your desired network, and enter the access password.

11:29 99%

Settings

First use setup
Below parameters must be configured before other settings can be made.

Step 1 of 3: Configure WiFi access

WiFi mode: AP

Access Point SSID: EVCS-HQ2326CVFJ3

Access Point Passphrase: *****

Access Point IP address: 192.168.0.1

Access Point network mask: 255.255.255.0

Confirm network settings: Confirm

11:32 99%

Settings

First use setup
Below parameters must be configured before other settings can be made.

Step 1 of 3: Configure WiFi access

WiFi mode: Station

Add manually: Add

Scan for WiFi networks: Scan

Step 2 of 3: Change web access credentials

This step is necessary to ensure secure access to the web interface. The default username is "admin". The default password corresponds to the one on the sticker inside the EVCS. We recommend setting up your own password and username.

11:29 99%

Settings

First use setup
Below parameters must be configured before other settings can be made.

Step 2 of 3: Change web access credentials


User: admin

Password: *****

Confirm Access credentials?: Confirm


Step 3 of 3: Set the maximum charging current

Set the maximum charging current with which the EVCS is allowed to charge (range: 6A - 32A).

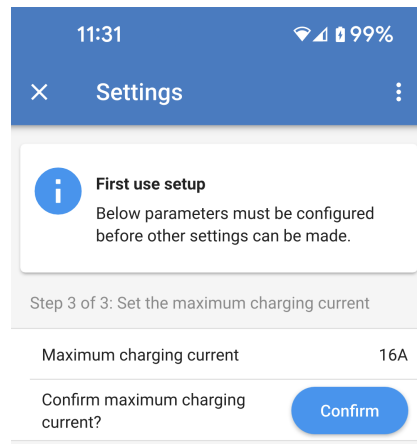**Initial setup complete**

You'll be returned to the Status page and the warning notification will have cleared.

You can now start using the EV Charging Station NS.

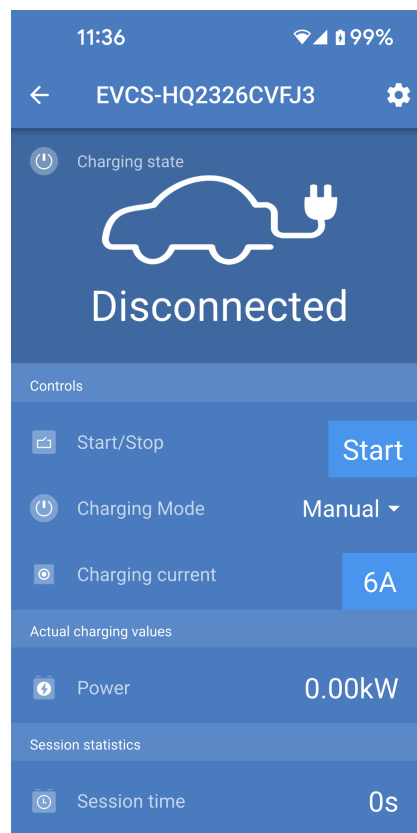**5.2. First use setup via WiFi access point**

The charging station broadcasts its own WiFi access point as soon as the charging station is powered for the first time. The following steps describe the first setup to prepare the charging station for operation.

Connect to the WiFi access point:

- I. Scan the QR Code on the internal label.
- II. Or go to the WiFi menu of your mobile device or laptop and manually add the access point that automatically broadcasts its SSID. SSID and Password are noted on a sticker inside the case.

1. Location setup:

Once connected to the access point, enter the default IP address 192.168.0.1 into a web browser. The default username is "admin". The default password is printed on the sticker inside the unit. The First setup process will then start:

Select the location and time zone where the EV Charging Station NS is being installed. Daylight savings time will automatically be applied accordingly.

1. Location setup: select your country and time zone

Region:

Country:

Country region:

Time zone:

[Next](#)

2. Off peak charging

Depending upon what location was chosen in the previous step, you may need to enable Off-peak charging.

2. Off peak charging

According to local regulations, by default, the EVCS must be configured to NOT charge between 8 AM - 11 AM, and 4 PM - 10 PM on weekdays (OFF-peak charging). You can deactivate it now or at any time after the 'First setup' procedure.

Off-peak charging state:

[Prev](#) [Next](#)

3. WiFi setup: Configure the WiFi network by choosing the WiFi mode

- I. **Access point:** The unit creates its own WiFi access point. This is either for setting up the unit or in the absence of a separate WiFi network including a GX device.

Set SSID, IP address and Netmask according to your needs.

3. WiFi setup: configure your WiFi network

WiFi mode: ☒ AP

SSID:

Password:

IP address:

Mask:

[Prev](#) [Next](#)

- II. **Station:** Connects the device to a local WiFi network that includes other Victron devices like a GX device or VRM.

Change the WiFi mode from AP to Station.

Click the Scan button to search for other WiFi networks or add manually a known AP by clicking the Add button. Note the WiFi standards: 802.11 b/g/n (2.4Ghz only).

3. WiFi setup: configure your WiFi network

WiFi mode: ☒ Station

Scan for WiFi networks: [Scan](#)

Add local WiFi network: [Add](#)

Local WiFi network list:

Nº	SSID	Password	Use	Delete

Scan period (s):

RSSI threshold:

IP mode: ☒ Auto

[Prev](#) [Next](#)

Tick the network you wish to connect to and then click Apply.

Please select the WiFi networks

 Mikrotik-vLAN5, 4C:5E0C:14:57:C1, 4, -348m, 3(WPA2_PSK), 4(CCMP)	☒
 SilverSurfer, B4:FB:E4:C4:01:54, 5, -498m, 3(WPA2_PSK), 4(CCMP)	☐
 AudioVisual, BA:FB:E4:C4:01:54, 5, -508m, 3(WPA2_PSK), 4(CCMP)	☐
 Automation&Control, BE:FB:E4:C4:01:54, 5, -508m, 3(WPA2_PSK), 4(CCMP)	☐
 Guest, C2:FB:E4:C4:01:54, 5, -508m, 3(WPA2_PSK), 4(CCMP)	☐
 EE-78ZGWS, 3C:58:36:01:9D:C0, 1, -838m, 3(WPA2_PSK), 4(CCMP)	☐
 EE WIFI, 02:58:36:01:9D:C1, 1, -838m, 0(OPEN), 0(NONE)	☐
 SKYCWHR, 06:3E:03:22:1D:2C, 6, -858m, 3(WPA2_PSK), 4(CCMP)	☐
 EE-78ZGWS, A2:F0:83:93:84:E9, 6, -858m, 3(WPA2_PSK), 4(CCMP)	☐
 EE-KTG3W2, B8:6A:F1:29:CD:02, 1, -888m, 7(WPA2_WPA3_PSK), 4(CCMP)	☐
 EE WIFI, 0A:6A:F1:29:CD:03, 1, -888m, 0(OPEN), 0(NONE)	☐
 EE WIFI, 6A:86:20:5F:1B:6E, 6, -888m, 0(OPEN), 0(NONE)	☐
 DIRECT-4F-HP DeskJet 2700 series, A8:B1:3B:2C:71:50, 6, -888m, 3(WPA2_PSK), 4(CCMP)	☐

Cancel Apply

In the Password box, enter the external WiFi password and click Next.

3. WIFI setup: configure your WiFi network

WiFi mode: ☒ Station

Scan for WiFi networks:

Add local WiFi network:

Local WiFi network list:

Nº	SSID	Password	Use	Delete
1	Mikrotik-vLAN5	***** 	☒	

Scan period (s):

RSSI threshold:

IP mode: ☒ Auto

In case you need a static IP rather than DHCP, change the IP mode button to Manual and fill in the static IP address, Mask, Gateway and DNS.

3. WiFi setup: configure your WiFi network

WiFi mode: ☒ Station ☐ Manual

Scan for WiFi networks:

Add local WiFi network:

Local WiFi network list:

Nº	SSID	Password	Use	Delete
1	MikroTik-vLAN5	*****	☒	Delete

Scan period (s):

RSSI threshold:

IP mode: ☐ Station ☒ Manual

IP address:

Mask:

Gateway:

DNS:

4. Access setup:

- I. Click into the Username field and type in your own username. The default username is 'admin'.
- II. Click into the Password field and change the password to a new one with at least 8 characters, containing lower, upper and special characters. The default password is printed on the sticker inside the unit.
- III. Confirm your new password.
- IV. Click Next.

4. Access setup: assign your username and password

Username:

Password:

Good

- Must have at least 8 characters
- Use lowercase/UPPERCASE/number/special characters

Confirm password:

5. Charging current setup:

Set the maximum allowable charging current (6 - 32A).

5. Charging current setup: set the maximum charging current


Max charging current (6 - 32 A):

6. First setup completion:

After clicking Save, the EV Charging Station NS will restart.

Log in with the credentials that you entered in step 3.

The main Dashboard page will be displayed and the EV Charging Station NS is ready to use.

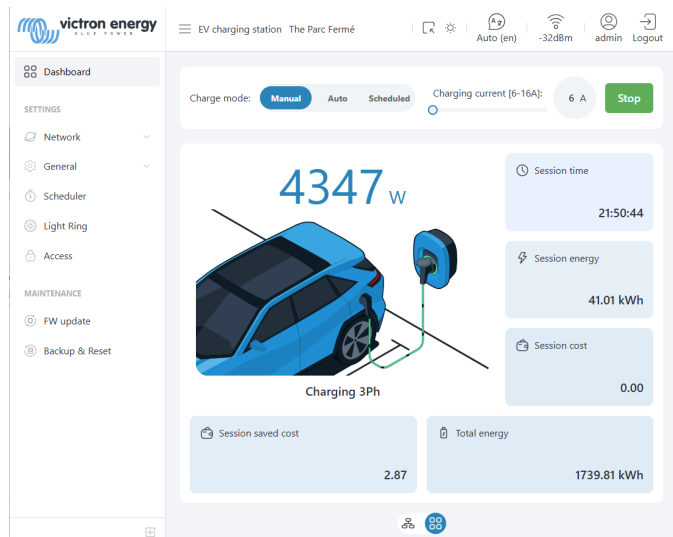

5.3. MQTT activation

This is the recommended method of connecting the EV Charging Station NS to a GX device.

Communication with a GX device was previously based on Modbus TCP. MQTT is more flexible and gives the EV Charging Station NS access to a larger GX dataset, so the two devices exchange more information and work together better.

- The EV Charging Station NS can be reached from anywhere with VictronConnect-Remote.
- Warnings and errors are shown on the GX device.

- The GX device can control charging for GX Opportunity Loads and Dynamic ESS.
- It is the foundation for future features.

Modbus TCP remains available as an alternative.



The EVCS firmware must be version 2.09 or later.
The GX device must be running version 3.80 or later.
VictronConnect must be version 6.41 or later.

 
The EV Charging Station NS and the GX device must be paired before they will communicate with each other.

The GX device must first be set to pairing mode where it will listen for a pairing request from the EV Charging Station NS.

5.3.1. Activate pairing mode

Either from the GX device touchscreen or its web interface, navigate to Settings → Integrations → MQTT Devices.


Tap the Activate button to enable pairing mode on the GX device.



A popup will show briefly at the bottom of the page informing you that pairing mode has been enabled. Additionally, the Activate button will be replaced by a countdown timer showing the remaining time that pairing is active.



If you run out of time, you can simply tap the activate button again.

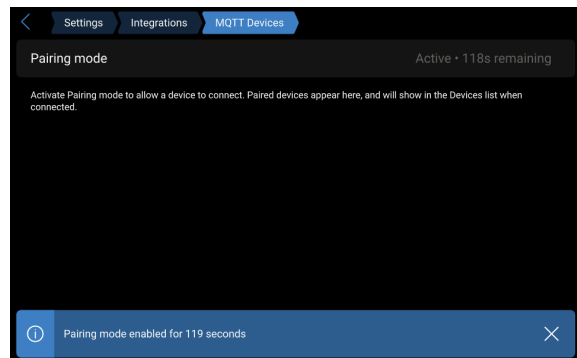

As an alternative to the above two steps, pairing mode can also be activated using the physical button on certain GX devices that are equipped with one.

Double press the button with a pointed object, like a pen.

The blue LED on the front of the GX device will flash steadily when pairing mode is active, and will time out after two minutes.



5.3.2. Pairing via EVCS web interface

From the EV Charging Station NS web interface, navigate to General → GX device.


Ensure that Communication is set to Enabled.

Set the communication type to MQTT.

Tap the "Discover" button to find GX devices on the network.




The EV Charging Station NS and the GX device need to be on the same network subnet.

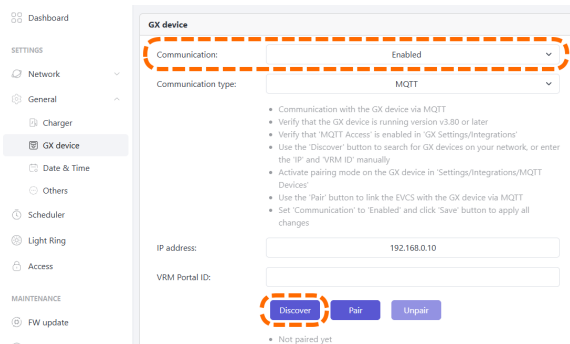

A popup box will show all GX devices which have been discovered on the network.

Tap or click on the GX device you want to pair with.

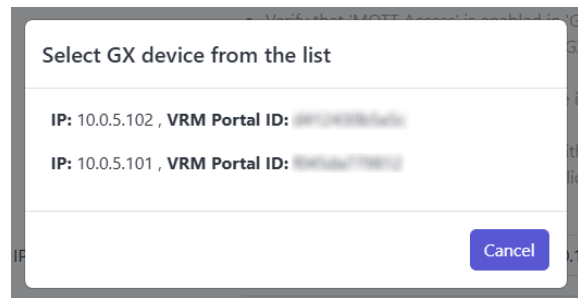


The IP address and VRM Portal ID of the selected GX device will be populated in the respective fields.




Ensure that **Pairing mode [16]** is still active of the GX device. If it has timed out, activate it again.

Tap the Pair button to begin the pairing process.

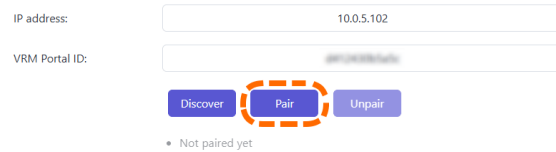

Once successfully paired, a message will pop up at the bottom of the page.


The details of the paired GX device will be written below the buttons.

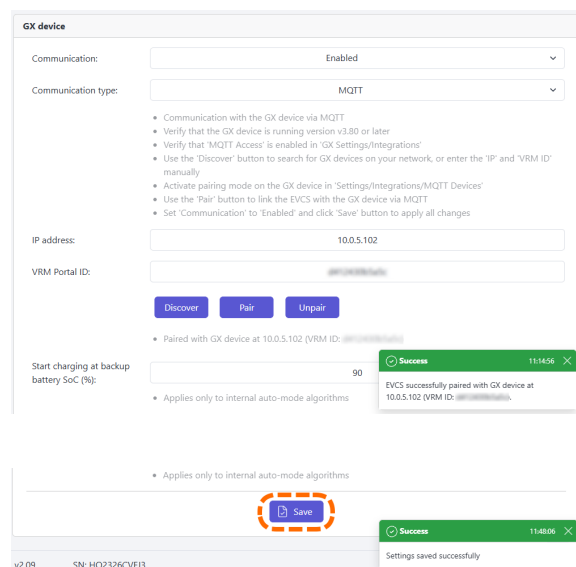


Finally, click the Save button at the bottom of the page

Additionally, on the GX device, the EV Charging Station NS will be listed as a paired device.

The EV Charging Station NS appears in the device list, with a brief description of its status.

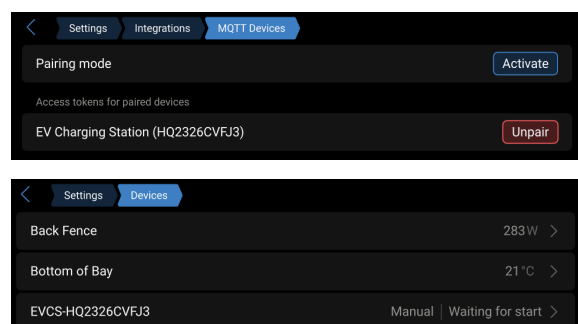

The EV Charging Station NS shows on the main Overview page of the GX device.

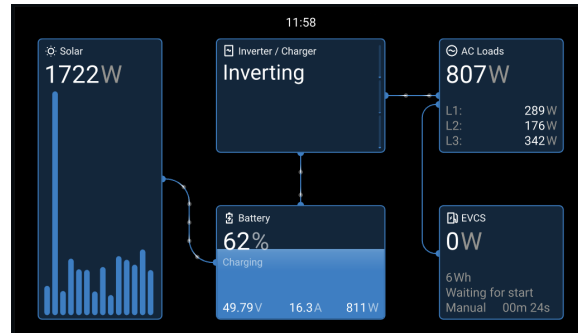

5.3.3. Pairing via VictronConnect

This method is an alternative to the [web interface \[16\]](#) method described previously. The pairing process here uses VictronConnect instead.


If you have already completed the pairing process using the web interface, and communication is established, then you can skip this section.



VictronConnect version 6.41 or later is required.

Connect to the EV Charging Station NS using the VictronConnect app.

Navigate to Settings → General → GX Device.
Tap Selected GX (None).

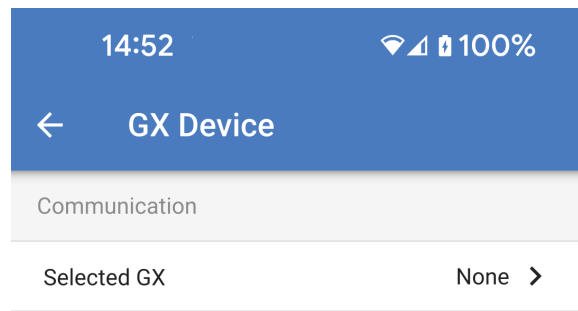

Turn "Enable communication" on.

Set the "Communication type" to MQTT.

Tap the "Discover" button to find GX devices on the network.



The EV Charging Station NS and the GX device need to be on the same network subnet.

Any discovered GX devices will appear in a list.

Tap "Select" to choose the GX device you want to pair with.

14:55

100%

←

GX Communication

Enable communication

☒

Communication type

MQTT

IP Address

192.168.0.10

VRM Portal ID

Establish communication

Ensure the GX device is in pairing mode before pairing.

PAIR

Communication not established:

Device discovery

Discover

Device discovery

Discover

Discovery results

IP: 10.0.5.102

VRM ID:

SELECT

IP: 10.0.5.101

VRM ID:

SELECT

The IP address and VRM Portal ID of the selected GX device will be populated in the respective fields.



Ensure that **Pairing mode [16]** is still active of the GX device. If it has timed out, activate it again.

Tap the "Pair" button to begin the pairing process.

15:05
100%

GX Communication

Enable communication

Communication type
MQTT

IP Address
10.0.5.102

VRM Portal ID

Establish communication
Ensure the GX device is in pairing mode before pairing.

PAIR

Communication not established:

Once successfully paired, the status should change to "Communication established" in green, along with the IP address and VRM ID of the GX device.

15:05
100%

GX Communication

Enable communication

Communication type
MQTT

IP Address
10.0.5.102

VRM Portal ID

Establish communication
Ensure the GX device is in pairing mode before pairing.

PAIR

Unestablish communication

UNPAIR

Communication established.
IP: 10.0.5.102
VRM ID:

Additionally, on the GX device, the EV Charging Station NS will be listed as a paired device.

The EV Charging Station NS appears in the device list, with a brief description of its status.

Settings
Integrations
MQTT Devices

Pairing mode
Activate

Access tokens for paired devices

EV Charging Station (HQ2326CVFJ3)
Unpair


Settings
Devices

Back Fence
283 W

Bottom of Bay
21 °C

EVCS-HQ2326CVFJ3
Manual | Waiting for start


The EV Charging Station NS shows on the main Overview page of the GX device.

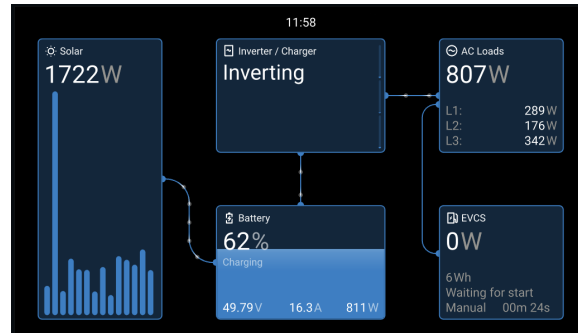

5.4. GX device setup, configuration and operation


5.4.1. Setup menu and options

As soon as MQTT communication has been activated, the named EVCS appears in the device list and displays the current mode and charging status.

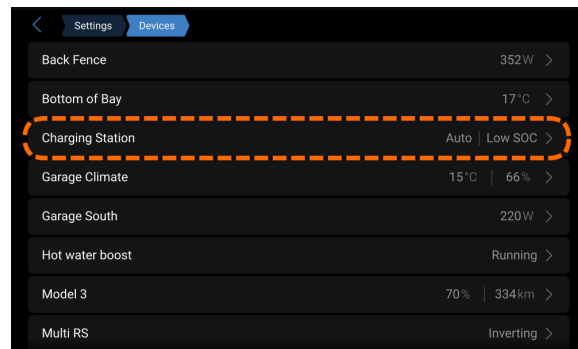

This sub menu displays the current charging session with charging power per phase.

The charging mode can be changed along with any other parameters related to a particular charging mode.

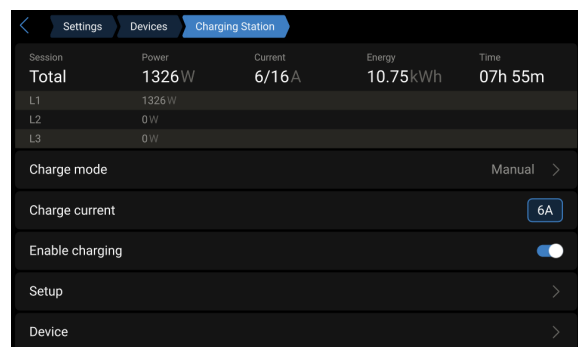


The Setup menu allows some settings to be configured, including the position that the EV Charging Station NS is installed at.

Autostart will enable charging as soon as the vehicle is plugged in.




 When charging is enabled, it does not necessarily mean that the vehicle will start charging right away. It means that the EV Charging Station NS will be ready to start once a schedule becomes active, for example.



The Device sub menu displays the EV Charging Station NS parameters.

The name of the EV Charging Station NS can be changed.

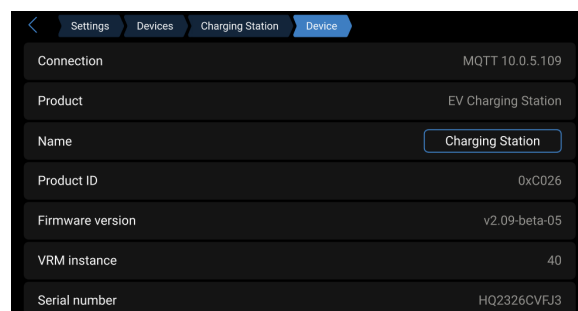

5.5. VictronConnect setup, configuration and operation

5.5.1. Setup


The following steps are necessary to successfully connect to the EV Charging Station NS via Bluetooth and VictronConnect:

1. Make sure Bluetooth is enabled in your EVCS.



In case Bluetooth is disabled, see the [Networks menu \[52\]](#) chapter for details on enabling Bluetooth.

2. Download and install the VictronConnect app from the App Store or Google Play.
3. Open VictronConnect and scroll through the list of devices for the EVCS.
4. Tap on it to launch the pairing dialog. Enter the pairing code which is the unique number on the sticker inside the housing.
5. If the pairing was successful, the EVCS overview page is displayed.

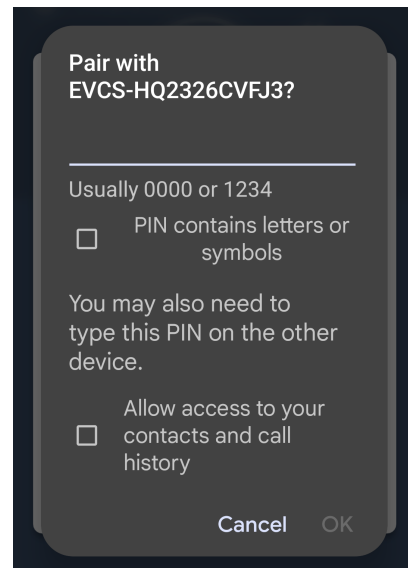

5.5.2. Overview page

The overview page provides information about the charging state, controls to start/stop charging or changing the charging mode and charging current. Furthermore, the actual charging values and session statistics can be monitored.

Controls:


- **Start/Stop:** Start or stop charging when in manual mode.
Note that after pressing the stop button, first the charging current is reduced to a minimum and only then the contactor opens (with a delay of 2 seconds).
- **Charging mode:** Change the charging mode to manual, auto or scheduled.
- **Charging current:** Adjust the charging current (range: 6-32A, depending on the Minimum and Maximum charging current set on the General Settings page or on the web interface).
In Scheduled mode, the charging current is not adjustable here because it is defined in the schedule.

Actual charging values:

- **Power:** Charging power. With a multi-phase supply, all phases are combined.

Session statistics:

- **Session time:** The time of the current charging session.
- **Session energy:** Total energy charged in this session.
- **Session cost:** The session cost (when charged from grid) depending on the energy price per kWh set in the EVCS settings, see the [General Settings \[27\]](#) chapter.
- **Session saved cost:** Saved cost based on energy charged from PV and depending on the energy price per kWh set in the EVCS settings.
- **Total Energy:** The total energy charged since initial installation.

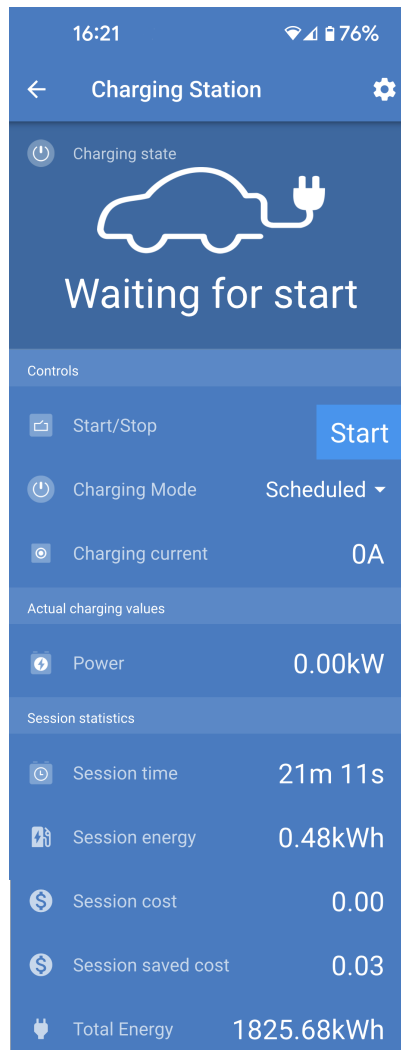


5.5.3. Settings page

The Settings menu is accessible by pressing the cog wheel from the top right of the Overview page.


The following menu options are available:

- **Network:** Change the network settings.
- **General:** Adjust the charger settings.
- **Scheduler:** Set up charging schedules.
- **Light Ring:** Configure the behaviour of the light ring.
- **Access:** Specify web access credentials.

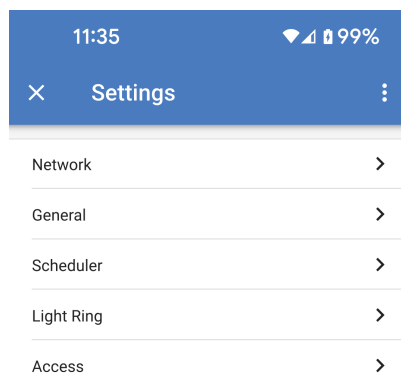

Tap the three vertical dots in the top right corner of the settings page to perform the following actions:

- **Import settings from file:** Import previously saved settings from a file in the settings library.
- **Save settings to file:** Save the current settings to a file which will be stored in the settings library. This file can be used as a backup to restore settings on this EV Charging Station NS or to easily apply the same settings to another one.
- **Share settings:** Share the settings file via email or other social apps which may be in use on the Android or iOS device for example.
- **Product info:** Displays the EV Charging Station NS model number and serial number. There is also a switch to enable or disable Bluetooth. See the [Product info \[25\]](#) section for more information.
- **Reset to defaults:** Reset all settings to the factory defaults. This will mean that any customised settings will be lost and setup will need to be performed again or imported from a previously saved settings file.

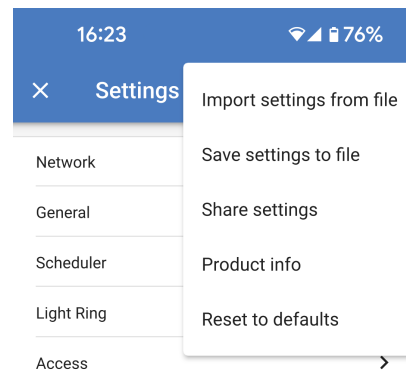

5.5.4. Product info page


To get to the Product info page, tap the 3 vertical dots icon from the Settings page.

- **Product:** Shows the product name and the model number.
- **Serial number:** Shows the serial number of the EV Charging Station NS.
- **Pin code:** Pin code is hidden but it can be changed using the change button to the right.
- **Custom name:** Change the friendly name of the EV Charging Station NS.
- **Firmware:** Displays the current firmware version running on the EV Charging Station NS.
- **Bluetooth:** Enable or disable the Bluetooth functionality of the EV Charging Station NS.

More about how to assign your own name to your EV Charging Station NS and how to deactivate and reactivate Bluetooth, please refer to the [VictronConnect App manual](#).



Note that if you disable Bluetooth via VictronConnect, it will have to be re-enabled via the web interface [Networks menu \[52\]](#) or by using the [Reset to factory defaults \[35\]](#) feature, either via the web interface or the DEF button procedure. For older devices that have Bluetooth disabled from the factory, use the web interface's network menu to enable Bluetooth.

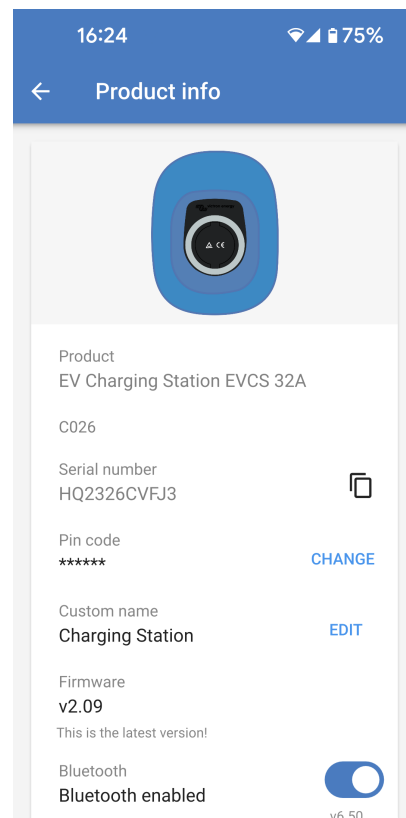

5.5.5. Network Settings

The Network information section shows:

- **Current status:** Shows the current status of the network.
- **Connected to:** Displays the name of the WiFi network that the EV Charging Station NS is connected to.
- **IP address:** Displays the LAN IP address of the EV Charging Station NS.

The WiFi section allows configuration of the WiFi settings for the EV Charging Station NS.

- **Mode:** Allows the choice of local WiFi connection or if the EV Charging Station NS should create a WiFi Access Point. The EV Charging Station NS should usually only be set up to act as an Access Point if there are no other WiFi networks available.



The EVCS local WiFi connection (STA) mode is designed to operate within a network environment that uses certified, standards-compliant networking equipment. Ensure that the WiFi access point or router used in your installation meets applicable regulatory requirements and is RED-compliant, so the EVCS remains protected and performs reliably within a properly managed network.

- **IP Configuration:** Option to allow automatic (DHCP) IP address allocation or manual fixed IP address configuration. Automatic IP configuration is the recommended option. The manual option is only intended for advanced network configurations or by instruction from the network's administrator.
- **Scan period:** To allow periodic automatic WiFi network scanning and if so, to define the period of time between automatic scans.

The Access point list section shows discovered local WiFi networks or allows for a WiFi network to be added manually.

The currently connected Access Point name is shown here in green along with "FORGET" and "DISABLE" buttons.

- **Add AP manually:** Provides the option to add a WiFi network manually. This may be used in circumstances where the required network's SSID is hidden and doesn't show in the list of discovered networks.
- **Scan for WiFi networks:** Tap the "SCAN" button to immediately scan for available WiFi networks nearby.

A list of all available WiFi networks will begin to appear as they are discovered. The list includes the Access Point name, its security status shown with a padlock symbol. The signal strength received by the EV Charging Station is displayed with the WiFi symbol to the right.

Tap the "ADD" button beside the network that you wish to connect to. You'll be asked to enter the password for the selected network if applicable.

5.5.6. General Settings

The General settings page lists the options for the general configuration of the EV Charging Station NS.

Charging settings section has the following options:

- **EV Charger position:** This option selects where in the system the EV Charging Station NS is wired. For example, the EV Charging Station NS could be wired on the AC Input side or the AC Output side of a MultiPlus.
- **EV Charger autostart:** This option defines whether or not the EV charger will begin charging automatically when the EV charging cable is connected to the vehicle.
- **Contactor active when charged:** When the EV is charged the contactor can be set to remain closed or to open which will fully disconnect the EV from the supply.
- **Maximum charging current:** The maximum charging current that the EV Charging Station NS will supply to the EV in any event. The configurable range is 6A to 32A.
- **Minimum charging current:** The minimum charging current that should be supplied to the EV unless it is charged to the desired level. The configurable range is 6A to 32A.
- **Power calibration:** Adjust this setting to calibrate the Actual power reading.
- **Actual power:** Displays the actual combined power of all phases that the EV Charging Station NS is supplying to the EV.

Other settings section provides:

- **Energy price per kWh:** Set the price of energy imported from the grid.
- **GX Device:** Select this option for communicating with a GX Device such as a Cerbo GX or Ekrano GX.
- **Date & Time:** Set the time zone, date and time.

Reboot EVCS:

- **System reboot:** tap the "REBOOT" button to reboot the EV Charging Station NS.

EV Charger position

Select the position that the EV Charging Station NS is wired in the system.

If the EV Charging Station NS is wired anywhere before the Inverter / Charger then select the "Inverter AC in" option.

Alternatively, if the EV Charging Station NS is wired after the Inverter / Charger or is wired after an Inverter then choose the "Inverter AC out" option.

EV Charger autostart

Choose whether or not the EV Charging Station NS starts automatically when the charging cable is connected to the EV.

Select "Enabled" to have charging start automatically when the charging cable is connected to the EV.

Select "Disabled" if you don't want charging to start automatically. In this case charging needs to be started manually by pressing the "Start" button from the Overview page. This can help to prevent unauthorised use of the EV Charging Station NS.

16:25 75%

← General

Charging settings

EV Charger position Inverter AC out

EV Charger autostart Enabled

Contactor active when charged Disabled

Maximum charging current 16A

Minimum charging current 6A

Power calibration 0.87

Actual power 0.00kW

Energy price per kWh 0.07

GX Device >

Date & Time >

Reboot EVCS

System reboot Reboot

EV Charger position

☒ Inverter AC out

☐ Inverter AC in

CANCEL OK

EV Charger autostart

☐ Disabled

☒ Enabled

CANCEL OK

Contactor active when charged

Choose whether or not the contactor within the EV Charging Station NS remains closed or opens when the EV is charged but the cable is still connected.

Select "Enabled" for the internal contactor to remain closed when the EV is charged. For example, this can be useful if you would like to pre-condition the cabin air using electricity from the charging source rather than the EV battery.





Some vehicles may present an error if the EV Charging Station NS contactor remains closed after charging has stopped.

Select "Disabled" if you want the internal contactor to open when the EV is charged. This has the effect of disconnecting the EV from the supply as if the charging cable is removed.

Energy price per kWh

Enter the price of imported electricity per kWh. This will be used to calculate the session savings.

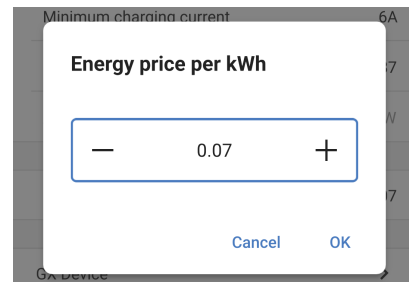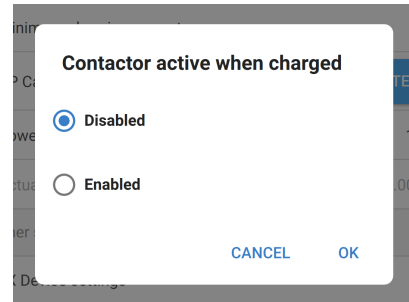

GX device communication


The GX device settings page is accessible from the General settings page.

- **Selected GX:** Shows the IP address of the connected GX device and the VRM Portal ID.
Tap this field to make changes.
- **Start charging at backup battery SOC:** The minimum backup battery SOC before the EV Charging Station NS starts charging in Auto mode.
- **Stop charging at backup battery SOC if off grid:** When off-grid or the grid is not available, then the EV Charging Station NS will stop charging when the backup battery SOC falls below this level.
- **Allow Battery/Grid power for Auto mode:** Enable this setting to allow Auto mode to continue charging the EV at minimum current even if there is insufficient excess solar power. This helps to minimise automatic charging enable/disable cycles when in Auto mode. Note: The EV Charging Station NS cannot decide if the energy comes from the battery or grid, this is up to the inverter/charger in the system.
- **Allow low excess solar power for auto mode:** If there is not enough PV power to satisfy the required car charging power, this option allows the EV Charging Station NS to make up the deficit using grid power. This only operates in Auto mode.
- **Battery/Grid power timeout:** If the above setting is enabled then this is the maximum continuous amount of time that the EV Charging Station NS will draw power from the battery or grid.
- **Overload protection:** When enabled, this setting will read the overload status of the system inverter. In the event of an overload then the EV Charging Station NS will reduce its charging current to minimum and wait about 5 seconds. If the inverter overload condition is still active then the EV Charging Station NS will stop charging. EV charging will resume a short period of time after the inverter overload condition has cleared.

If multiple overload events are detected within a certain time period the the EV Charging Station NS will reduce the charging current by 10%.

The same applies to grid-tied system where an enforced grid current limit is exceeded.

A warning will be displayed in VictronConnect or in the EV Charging Station NS if charging power is reduced or if charging is interrupted.
- **Input current limit:** This displays the enforced grid current limit which is applied to grid-tied systems.
- **Backup battery emulation:** This should only be enabled in systems without a backup battery installed. Enabling this option allows the EV Charging Station NS to emulate a system battery. This allows Auto mode to work even if there is no physical battery in the system.

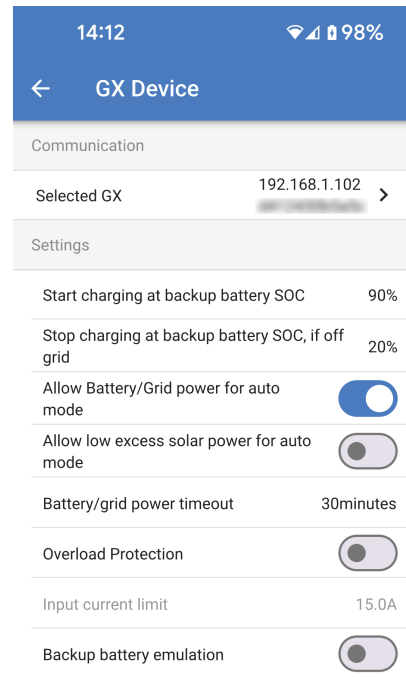

- **Enable communication:** Enable or disable communication between the EV Charging Station NS and the GX device.
- **Communication type:** Choose between MQTT or Modbus TCP. MQTT is the preferred method.
- **IP address:** Shows the IP address of the connected GX device.
- **VRM Portal ID:** Shows the VRM Portal ID used by the GX device.
- **Establish communication:** Use this to set up communication with a GX device or to change to a different GX device. This is generally not needed if communication is already established as shown in green below.
- **Unestablish communication:** Sever communication with an already connected GX device.
- **Device discovery:** If the communication check fails then verify that the GX IP address specified is correct or use the "DISCOVER" button to search for a local GX device as below.

- **Device discovery:** Tap the "DISCOVER" button to allow the EV Charging Station NS to automatically discover any GX devices on the local network.

Any GX devices which have been found by Device discovery will be listed.

Tap "SELECT" to pair the desired GX device to the EV Charging Station NS. This will then become the GX device that the EV Charging Station NS communicates with and its details will be populated in the IP Address and VRM Portal ID fields.

Date & Time

The correct date and time is essential for scheduled charging to work correctly.

- **Region:** Select your time zone region.
- **Location:** Choose your time zone.
- **Offset:** If UTC region is selected then it will be necessary to enter the correct offset for your time zone.

System reboot

- Tap the "REBOOT" button to reboot the EV Charging Station NS. Select "YES" on the popup window to confirm reboot.

5.5.7. Scheduler

If the Charging Mode is set to "Scheduled" from the Overview page then the EV Charging Station NS will charge according to the schedules set in this section.





Multiple schedules can be created for different times of the day and / or days of the week.

- **Add a new schedule:** Tap here to configure a new schedule.

On the Scheduled scene configuration page you can adjust the following conditions. The time conditions are expressed in 24h format.

- **Enable:** Toggle the current scene to enable or disable it.
- **Start time:** The time that you want the EV Charging Station NS to begin charging.
- **End time:** The time that you want the EV Charging Station NS to stop charging.
- **Current:** The maximum amount of current to charge the EV during this schedule.
- **Repeat:** Select the drop down menu to choose the type of repeat pattern.
 - **Daily:** The schedule will repeat every day.
 - **Mon-Fri:** The schedule repeats on week days Monday to Friday only.
 - **Weekends:** The schedule repeats on weekends Saturday and Sunday only.
 - **Custom:** A list of each day of the week is shown. Tick the days of the week that you would like this schedule scene to apply to.

Once you have set your preferences then tap the "Save new schedule" button to add it to the scheduler or "Cancel" if you don't want to create the new schedule.

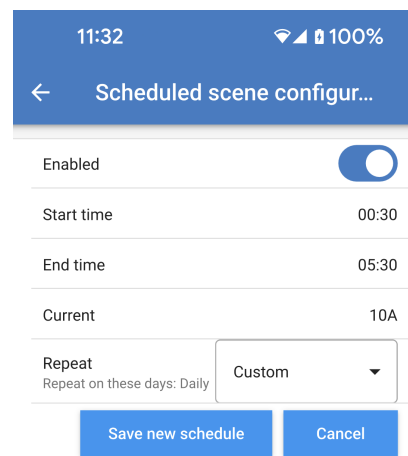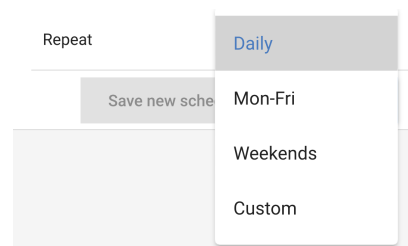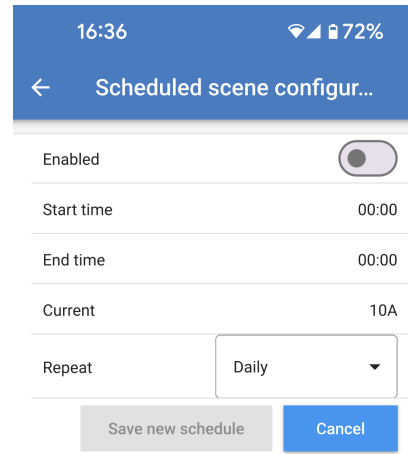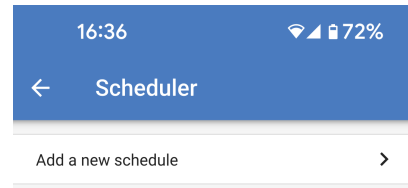

The newly created schedule will be added to the scheduler list. From here the individual schedules can be enabled or disabled, amended or deleted.

- **Status:** Shows the status of the scene. If the scene is disabled then it will not run.
- **Delete schedule:** Tap the "Delete" button to delete the schedule, a popup box will show to confirm schedule deletion.
- **Add a new schedule:** This will be shown below the existing schedules and can be used to create an additional schedule.

The screenshot shows a mobile app interface for a scheduler. At the top, the status bar shows the time 16:38, signal strength, and 71% battery. The app header is blue with a back arrow and the title 'Scheduler'. Below the header, a grey bar indicates 'Schedule 1: Waiting'. The main content area has a light blue background with a list of settings for the selected schedule. Each setting is on a separate line with a horizontal separator. The settings are: Status (Waiting), Enable (a toggle switch that is turned on), Start time (00:32), End Time (05:28), Current (10A), and Repeat (a dropdown menu showing 'Daily'). At the bottom of the settings list, there is a 'Delete schedule' label and a blue 'Delete' button. Below the settings list is a grey bar with the text 'Add a new schedule' and a right-pointing chevron icon.

Setting	Value
Status	Waiting
Enable	☒
Start time	00:32
End Time	05:28
Current	10A
Repeat	Daily
Delete schedule	<button>Delete</button>
Add a new schedule	>

5.5.8. Light Ring

The light ring surrounding the charging cable socket on the front of the EV Charging Station NS shows what it is doing at a glance.

There are various lighting modes and brightness settings to choose from to represent the status of the EV Charging Station NS:

- Disconnected
- Connected
- Waiting for start
- Waiting for sun
- Low SOC
- Charging Manual
- Charging Auto
- Charged

Light ring settings

The light ring of the EV Charging Station NS can be customised for each of its status modes as listed above.

- **Mode:** Choose the behaviour or pattern that the light ring displays:
 - Static
 - Blink
 - Breath
 - Color wipe
 - Color wipe inverse
 - Color wipe reverse
 - Color wipe reverse inverse
 - Color wipe random
- **Color:** Choose a color from the color picker or enter specific RGB values.
- **Period:** Specify how long the mode will be displayed for.
- **Brightness:** Adjust the brightness of LED ring for this mode, 0 - 100%.
- **Try this scene:** Tap the "TRY" button to test if the scene's color and brightness are suitable.

16:39 71%

← Light Ring settings

Brightness limit 10%

Disconnected:

Mode Static

Color

Period 1000ms

Brightness 25%

Try this scene Try

Connected:

Mode Breath

Color

Period 1000ms

Brightness 50%

Try this scene Try

5.5.9. Access

Web access credentials

The Web access credentials page allows you to change the access credentials for the web page of the EV Charging Station NS.

For security reasons it is strongly advised to change these credentials from their defaults.

- **User:** User name
- **Password:** Set a suitably strong password to prevent unauthorised access to the EV Charging Station NS.

16:40 71%

← Web access credentials

User admin

Password *****

5.5.10. Reset to defaults

It is possible to factory reset the EV Charging Station NS via VictronConnect. Note that this process will reset **all** settings to their default values and require the first setup (see the [First use setup via VictronConnect \[8\]](#) chapter for details) to be performed again.

To get to the Reset to defaults option, tap the 3 vertical dots icon from the Settings page and tap on "Reset to defaults".

A "Restore device?" confirmation popup will appear. Tap "YES" to continue with restoring the device to factory defaults.

Restore device?

All settings will reset to factory defaults.

NO

YES

5.6. Firmware updates

The EVCS firmware can be updated manually via the web interface or remotely via [VRM: Remote firmware update](#).

The easiest way to update the EVCS firmware is through the VRM's Remote Firmware Update feature. You can perform the update automatically with a single button press or manually if preferred. Follow these [step-by-step instructions](#) to learn exactly how to do this. Please note that this requires a GX device connected to the VRM portal.

To update the firmware manually via the web interface, follow the steps below:

1. Download the latest firmware release from [Victron Professional](#)

Make sure you have the correct firmware file. For the EVCS model with a display, select the firmware file that contains "C025" in the file name. For the EVCS NS model, select the firmware file that contains "C026" in the file name.

2. Open the web interface
3. Click the Backup & FW tab
4. Click the Open button and browse to the location where the provided firmware file is stored.
5. Select the firmware file (*.evcsup)
6. Click Update to start the update process

After a successful update, the charging station will restart, and the main page will be displayed again. All previous settings will be retained.

5.7. Reset to factory defaults and password recovery



Reset to factory defaults will reset **all** system settings to default values. The [First setup](#) must then be carried out again.

This can be avoided by performing a partial reset, which will reset only the Bluetooth PIN code and the admin password. However, this option is only available via the DEF button method.

In case the password is lost, the initial password can be recovered in different ways:

Reset to factory defaults from the web interface:

1. Click on the Settings button.
2. Click on the Backup & FW button.
3. Click on Reset to factory defaults.
4. Run the [First use setup via WiFi access point \[11\]](#) again.

Reset to factory defaults via VictronConnect:

1. Open VictronConnect and tap on the EVCS from the My devices list.
2. Tap the cog wheel icon in the top right on the Status screen.
3. Tap the three vertical dots icon on the Settings page and choose Reset to defaults.
4. A warning will appear that **all** settings will be reset to factory defaults. Tap YES to reset to factory defaults.
5. Run the [First use setup via VictronConnect \[8\]](#) again.

Partial and full reset to factory defaults using the DEF button inside the device:



The procedure described below should only be performed by qualified personnel as this process requires the EV Charging Station NS to be powered. Working under high voltage is very dangerous and can be fatal if used incorrectly.

• Partial reset

A partial reset only resets the admin password and Bluetooth PIN code, all other settings are preserved.

1. Open the unit by removing the backing plate. **Be careful not to touch the high-power parts inside the unit.** Only the area around the DEF button is safe.
2. For a partial reset, press the DEF button (see the image in [EV Charging Station setup web interface \[48\]](#) for its location) for more than 5 seconds but less than 15 seconds.

After releasing the DEF button, the RGB light ring starts blinking green rapidly to indicate that the partial reset is in progress.

Note that if your mobile device was successfully paired before resetting the PIN code, it is still possible to connect to the EVCS via VictronConnect as long as it is not unpaired. All other devices must be paired with the default PIN code as described in the VictronConnect [VictronConnect setup, configuration and operation \[23\]](#) section.

If you were logged in to the web interface using a browser prior to the partial reset, the admin password reset for that connection will not take effect until you log out of the web interface. All other devices require the default password printed on the sticker inside the device. until a new password has been assigned; see [Access menu \[53\]](#) for details.

3. Mount the backing plate onto the device and tighten the screws.
4. Assign a new admin password; see [Access menu \[53\]](#) for details.

• Full reset

1. Open the unit by removing the backing plate. **Be careful not to touch the high-power parts inside the unit.** Only the area around the DEF button is safe.
2. For a full reset, press the DEF button (see the image in [EV Charging Station setup web interface \[48\]](#) for its location) for more than 15 seconds until the RGB light ring starts blinking blue rapidly to indicate that the full reset is in progress, then release the button.
3. Mount the backing plate onto the device and tighten the screws.
4. Run the [First use setup via VictronConnect \[8\]](#) or [First use setup via WiFi access point \[11\]](#) again.

5.8. Maintenance

The EV Charging Station NS does not require specific maintenance.

6. Troubleshooting

6.1. CP Line Calibration



Starting with firmware v2.02, CP calibration is performed automatically every time an EV is connected to the EVCS. The Calibration button is hidden in the VictronConnect application and the web interface. However, it is still possible to perform manual calibration if you experience issues with EV detection. To do this, set Modbus TCP register 5133 to 0 (see section [Q11: I would like to control the EVCS via Modbus TCP. Is this possible and if so, how? \[39\]](#)). This disables automatic CP calibration and makes the Calibration button available for manual calibration.

What is CP?

CP is the control pilot signal (line) inside each Type2 charger connector. It is a bi-directional communication line that enables communication between the charging station and the EV. Among other things, the charging station informs the EV of the maximum charging current available. At the same time, the EV informs the charging station about its status, for example whether the EV is connected or whether it is currently charging.

Why is CP line calibration necessary?

Due to differences in cable length and manufacturer as well as deviations in the ratings of electronic components, the CP signal may show deviations. The CP calibration takes the signal deviation into account and adjusts the signal values to the required ranges.

When does the calibration of the CP line have to be carried out?

There are several reasons for a CP line calibration. The most important are:

- The EV is connected to the EVCS via the charging cable, but still reports a disconnected state
- The EV was disconnected from the EVCS but was not reported as disconnected.
- When charging the EV, the EVCS frequently switches between the 'charging' and 'charged' states
- The EVCS does not start charging after connecting the vehicle because it cannot detect the correct state after connection


How is a CP line calibration carried out?

Please see the note above for instructions on how to enable the manual calibration feature.

The CP calibration can be done via the web interface (Settings → General → Charger → CP calibration or via VictronConnect (Settings page). The procedure is as follows:

1. Press the calibration button
2. Connect the EV to the EVCS and then tap on Next in VictronConnect
3. Press the 'Vehicle is connected' button to confirm that the EV is indeed connected to the EVCS (or tap on Next in VictronConnect)
4. Wait until the EVCS has completed the calculation

Once the calibration is complete, a message is displayed indicating that the calibration was successful

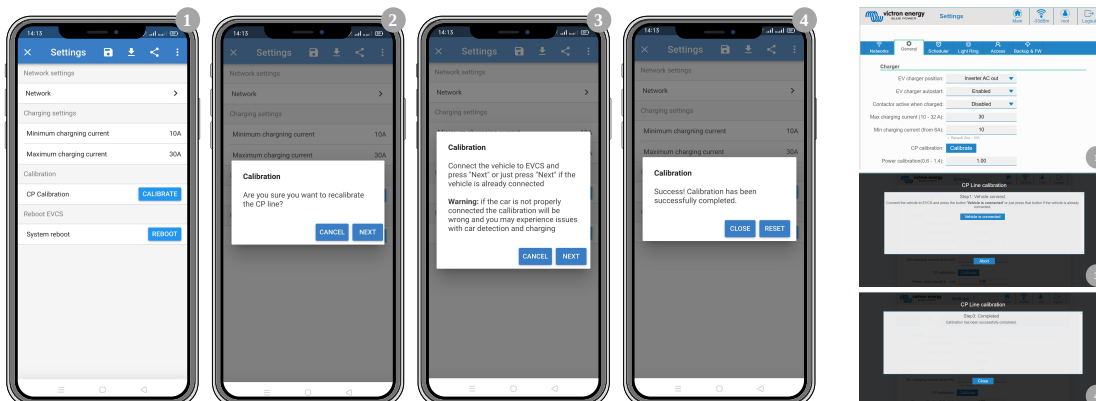

6.2. MQTT pairing

If pairing does not succeed, check the firmware and app versions given in the [MQTT activation \[15\]](#) section first.

No GX devices found after discovery

- Check that the EV Charging Station NS and the GX device are on the same network and the same subnet.
- Check the WiFi signal strength of the EV Charging Station NS. A value better than -70 dBm is preferable.
- Run the discovery a few times.
- Some networks block mDNS packets, which the discovery depends on.
- If the discovery still finds nothing, enter the IP address and VRM Portal ID of the GX device by hand.

Errors during pairing

- Check that pairing mode is still active on the GX device. It times out after two minutes.
- Pairing errors are shown with an error code and the reason.
- A message reading only 'Pairing error' indicates an internal error. Check the versions, retry the pairing, refresh the web interface or reconnect VictronConnect.

W-104: GX communication warning

Communication between the EV Charging Station NS and the GX device is not working.

- Check that both devices are on the same network.
- Check that the IP address and VRM Portal ID of the GX device stored on the EV Charging Station NS are correct.
- Check that the EV Charging Station NS is still in the paired devices list on the GX device.
- Repeat the pairing procedure, see [MQTT activation \[15\]](#).

6.3. Frequently asked questions

6.3.1. Q1: How do I prevent the charging station from being used by unauthorised persons?

Make sure EV charger autostart is disabled in general settings. This prevents the charging station from starting to charge automatically once it is connected to an EV.

Charging can then only be started or stopped via the web interface, VRM App widget, VRM controls and VictronConnect.

6.3.2. Q2: Does the EV Charging Station have RFID?

No. To prevent the charging station from being used by unauthorised persons, see Q1.

6.3.3. Q3: The light ring is annoying my neighbours during night, how can I disable the light ring?

You can completely disable the light ring in the light ring menu, changing the brightness to 0 or a lower level if you like.

6.3.4. Q4: Why isn't my car recognized when I connect the charging cable?

Try calibrating the CP line (general tab in the web interface or in the VictronConnect settings). This is sometimes necessary because the charging cables can differ slightly. Ground impedance is also important as all measurements are relative to ground (GND).

Please see the note above for instructions on how to enable the manual calibration feature.

6.3.5. Q5: Why does my EV Charging Station show up on multiple GX devices?

If there are several GX devices on the same local network, activate the IP address whitelist in the General tab of the web interface and then add only the IP address of the GX device with which the EVCS is to be controlled to the whitelist. After doing this, remove the EVCS from the other GX devices.

6.3.6. Q6: How much PV power do I need at least to charge the EV in automatic mode?

The minimum current for charging an EV is 6A@230V. You therefore need more than 1.3kW of PV.

However, if there is not enough excess solar power available to meet the minimum charge current requirement, it is possible to enable the 'Allow low excess solar power for auto mode' option. This option supplements the required power with additional power from the grid to meet the minimum current requirement. See chapter [VictronConnect setup, configuration and operation \[23\]](#) for details.

Example: To charge the EV at 6A while there is only 800W of excess solar power, 580W will be drawn from the grid to reach the required 1380W.

Note that there are EVs that require an even higher minimum charging current, e.g. the Renault Zoe; 10A.

6.3.7. Q7: Is it possible to operate multiple EV Charging Stations in one system?

Yes, this is possible. The available power is then shared between them.

6.3.8. Q8: The EV is fully charged, but the EVCS still alternates between start charging and stop charging, why?

The reason is most likely that the EVCS cannot correctly decode the 'charged' signal coming from the EV. Perform the [CP line calibration \[37\]](#) to remedy the problem.

Please see the note above for instructions on how to enable the manual calibration feature.

6.3.9. Q9: I keep getting a W-104 GX communication warning! What is the reason for this?

 **W-104:** GX communication warning

[Click here to open the manual](#)

This warning indicates that the EVCS cannot read data from the GX device due to a communication problem, even though communication with the GX device is enabled in the EVCS web interface.

The remedy depends on the communication method in use.

MQTT

The pairing between the EV Charging Station NS and the GX device may have been lost, or may never have completed. See [MQTT pairing \[38\]](#)

Modbus TCP

To remedy the problem, make sure that the IP address specified in the general settings of the web interface matches that of the GX device. Use the Discover function to allow the EVCS to derive the correct IP address from the VRM Portal ID - for more details, see the [EV Charging Station setup \[48\]](#) chapter. Also make sure that [ModbusTCP is enabled \[46\]](#) in the GX device itself.

6.3.10. Q10: Is a GX device in the system absolutely necessary?

This depends on the operation mode.

For automatic mode, communication between a GX device and the EVCS is mandatory. For manual and scheduled mode, a GX device can be installed, but does not have to be.

6.3.11. Q11: I would like to control the EVCS via Modbus TCP. Is this possible and if so, how?

Yes, this is possible. Modbus TCP offers a much higher degree of flexibility and control and provides access to a broader range of settings than what is described in the manual or available through the normal user interfaces.



Note that changes to the settings via Modbus TCP will void any support.

The recommended method for support on Modbus-TCP questions is to use the [Modifications section on Victron Community](#). Its frequently visited by many people using Modbus TCP and other methods of integrating with Victron products.

The EVCS Modbus TCP register list can be downloaded from the [product page](#) in the download area.

6.4. EVCS Notification, Warning, Alarm and Error Codes

The table below lists all possible warnings, alarms and error codes displayed in VictronConnect, a GX device or the web interface, which can be used for quick diagnosis and help with troubleshooting.

Errors

VictronConnect code	GX device code	Generic code	Message	Instructions/Remarks
E-01	#01	01	GND not present	Appears when the EVCS detects missing PE. Contact the installer.
E-02	#02	02	Welded contacts	Appears when the EVCS detects welded contacts of the power relay. Contact the installer.
E-03	#03	03	CP input short-circuit	Appears when the EVCS detects CP input shorted. Contact the installer.
E-04	#04	04	Residual current	Appears when the EVCS detects residual current. Contact the installer.
E-05	#05	05	Over temperature	Appears when the EVCS detects overheating. Remove EVCS from direct sunlight or contact the installer.
E-06	#06	06	Light sensor IC fault	Appears when the EVCS can't communicate with the light sensor IC (applied only for the United Kingdom of Gr. Brit. and N. Ireland). Contact installer.
E-07	#07	07	Tamper detected	Appears when the EVCS detects tampering (applied only for the United Kingdom of Gr. Brit. and N. Ireland). Contact installer.

Warnings

VictronConnect code	GX device code	Generic code	Message	Instructions/Remarks
W-101	#101	101	Initial setup not completed	Appears when the initial setup is not finished. Perform initial setup.
W-102	#102	102	EVCS externally blocked by grid operator	Appears when EVCS is locked externally by the grid operator. Contact your grid operator.

VictronConnect code	GX device code	Generic code	Message	Instructions/Remarks
W-103	#103	103	EVCS high temperature detected	Appears when a high temperature is detected in the EVCS box, but the temperature is not yet critical to stop charging. Remove EVCS from direct sun light or contact installer.
W-104	#104	104	GX communication warning	Appears when communication with GX is enabled but not present. Check GX device IP address and VRM portal ID configuration.
W-105	#105	105	Overload detected	Appears when EVCS detects overload.
W-106	#106	106	Overload active	Appears when EVCS detects overload and it is active.
W-107	#107	107	Scheduled mode failed - time sync issue	Appears when EVCS can't synchronise the local date/time and the user switches to scheduled mode.
W-108	#108	108	The charging current is limited by an external switch	Appears when EVCS is charging and the limit was activated by a special HW switch or over Modbus TCP. Currently only for Germany.
W-109	#109	109	The charging current is limited due to inverter overtemperature	Appears when EV is charging and inverter reported overtemperature

Notifications


VictronConnect code	GX device code	Generic code	Message	Instructions/Remarks
N-301	#301	301	Auto mode not available	Appears when attempting to set Auto mode but GX communication is disabled. Enable communication with GX device.
N-302	#302	302	Scheduled mode not configured	Appears when trying to set Scheduled mode but the scheduler is not yet configured. Add configuration for Scheduled mode.
N-303	#303	303	Car disconnected - can't start charging	Appears when the 'Start' button is pressed but the car is not connected to EVCS. Connect the car.

VictronConnect code	GX device code	Generic code	Message	Instructions/Remarks
N-304	#304	304	Charger error	Appears when the 'Start' button is pressed but the EVCS has an error. Check errors and resolve them; contact the installer.
N-305	#305	305	Initial setup not completed	Appears when the 'Start' button is pressed but the EVCS initial setup procedure is not finished yet. Perform initial setup.
N-306	#306	306	Charging will start according to scheduler settings	Appears when the 'Start' button is pressed but the EVCS is in Scheduled mode. Switch mode to 'Manual' if you want to control charging.
N-307	#307	307	Overload active - can't start charging	Appears when the 'Start' button is pressed but an overload is active.


7. Technical specification

EV Charging Station NS	
Input voltage range (V AC)	170 – 265 V AC @ 50 Hz
Rated charge current	32 A / phase
Nominal power	22 kW
Self-consumption	15 mA @ 230 V
Configurable min. / max. current	6 - 32 A
Connector type	IEC 62196 Type 2
GENERAL	
Means to Disconnect	External fuse or circuit breaker, max 40 A, depending on available input power
Configurable price/kWh calculator	Default setting: € 0.13 (adjustable)
Control type	Web interface, GX device, VictronConnect (locally via Bluetooth), VictronConnect-Remote (from anywhere via VRM)
Light Ring	55 configurable light effects available
Protection	External RCD is required
Operating temperature	-25 °C to +50 °C
Storage temperature	-40 °C to +80 °C
Humidity	95 %, non-condensing
Data communication	MQTT and Modbus TCP over WiFi, Bluetooth
Wi-Fi standards	802.11 b/g/n (2.4 GHz only)
ENCLOSURE	
Enclosure colour	Light Blue (RAL 5012), Traffic Black (RAL 9017), Traffic White (RAL 9016)
Power terminals	6-10 mm ² / AWG 10-8
Protection category	IP44
Ventilation	not required
Weight	3 kg
Dimensions (h x w x d)	372 x 292 x 122 mm
STANDARDS	
Safety	IEC 61851-1, IEC 61851-22 Detection for Relay Contact welded Detection for missing protective conductor Detection for missing Ground Detection for shorted CP

7.1. Dimensions

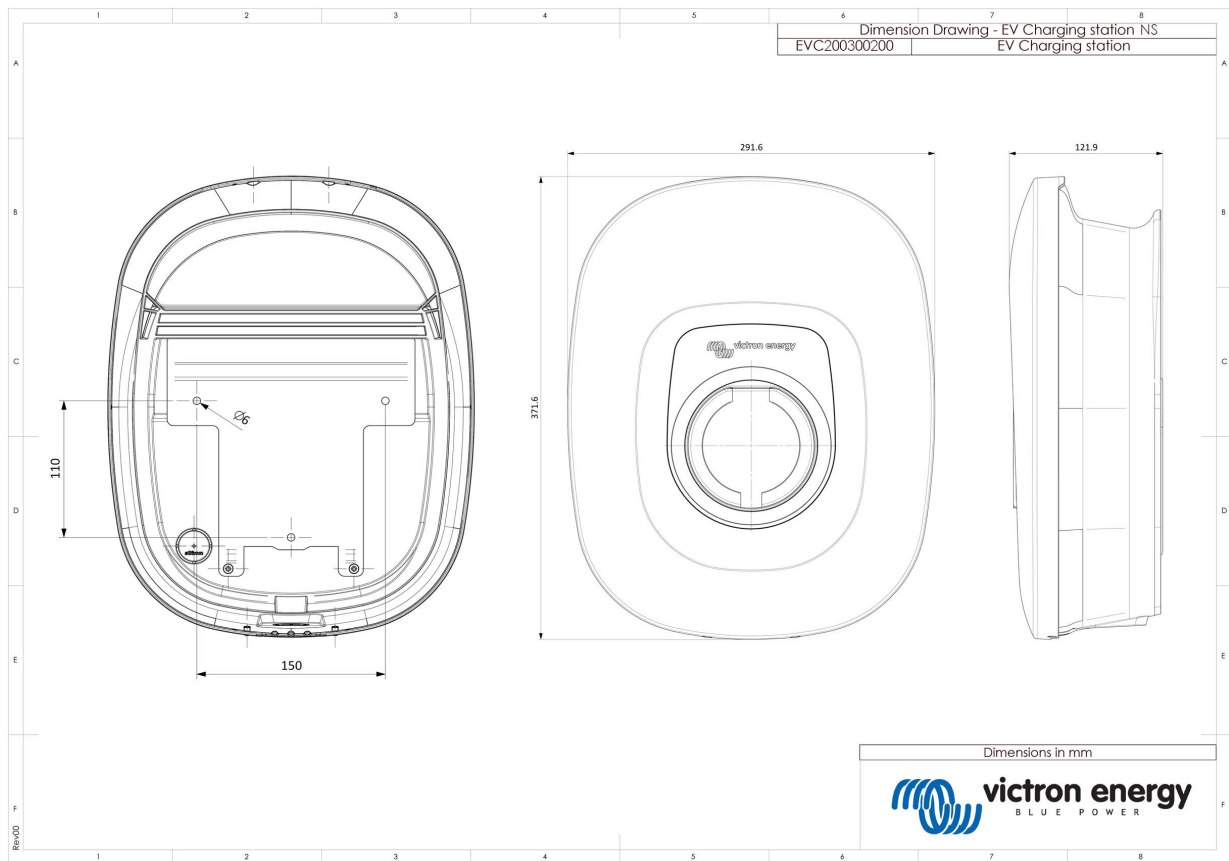

7.2. Drilling template

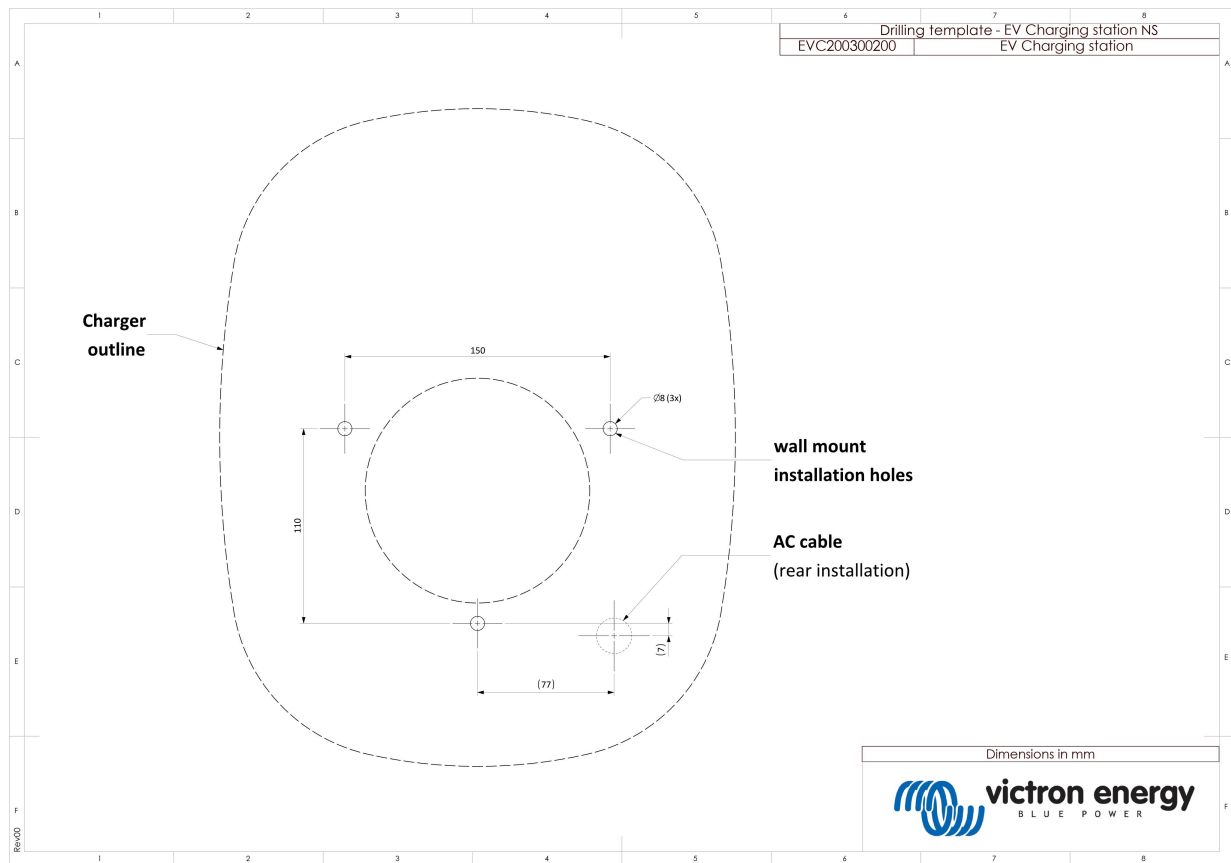


8. Appendix

8.1. External control of grid-relevant power (§14a EnWG - Germany)

The charging current of the EVCS can be limited to a maximum of 6 A using an external switch. This is particularly relevant in Germany to comply with the requirements of §14a EnWG (applicable to charging stations installed from 1 January 2024) and to enable the grid operator to reduce the charging power to help maintain grid stability. Note that this feature requires EVCS firmware v2.0 or later.

A warning (W-108 – The charging current is limited by an external switch) will appear on the display, web interface, or in VictronConnect when the switch is activated.

The diagram below shows how such a switch or relay should be wired to the EVCS.

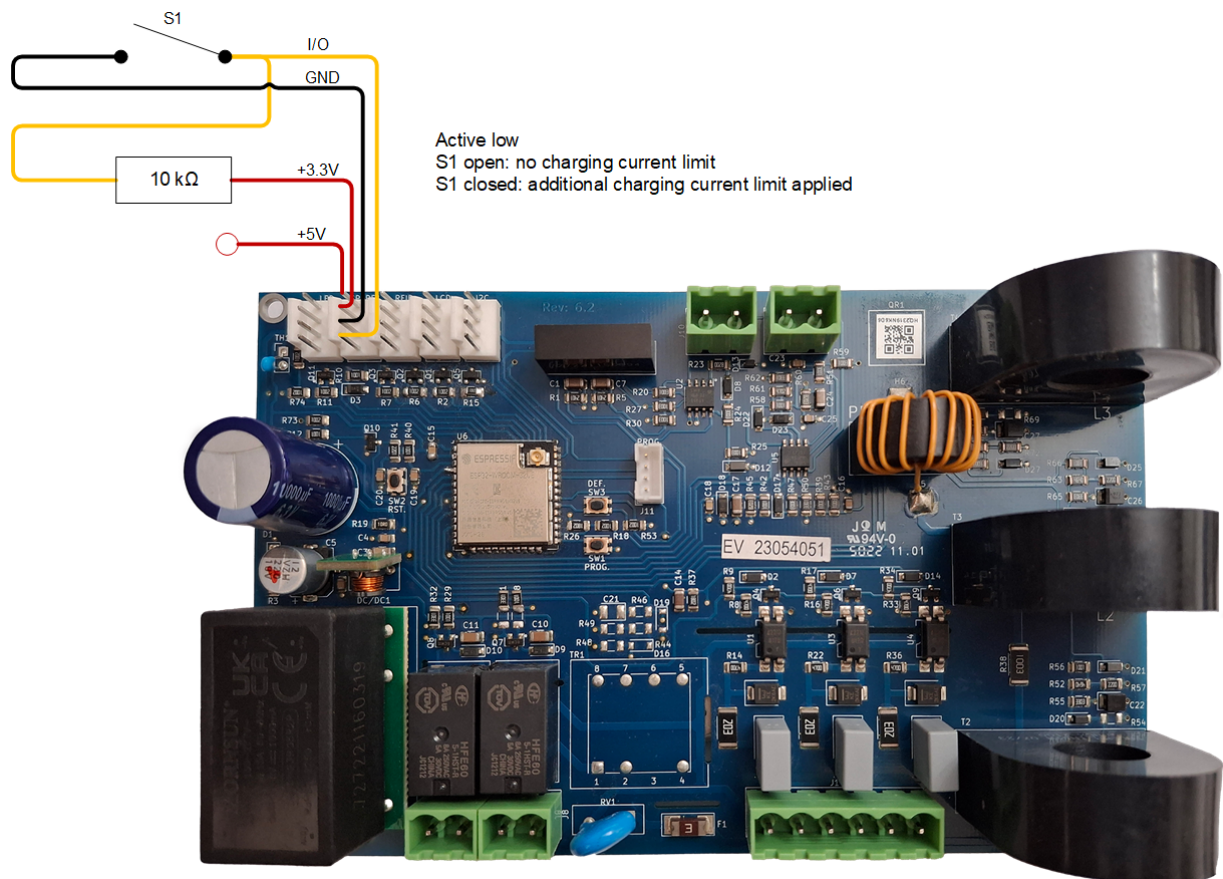

8.2. Modbus TCP activation


Modbus TCP settings

The ModbusTCP Server settings allow enabling the IP whitelist and to add GX devices' IP addresses to be added to it.

With the whitelist enabled, only the IP addresses added to the whitelist will be able to communicate with the EV Charging Station NS.


For security reasons it is highly advisable to enable the TCP whitelist and to add only the GX devices which need to communicate with the EV Charging Station NS. This may also be a requirement from grid operators in some countries.

- **Enable IP address whitelist:** Enable or disable the IP whitelist feature.
- **Add IP to whitelist:** Tap the "ADD" button to populate the whitelist with trusted IP addresses.

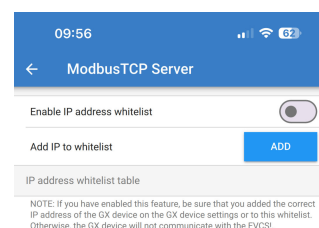

As an alternative, the EV Charging Station NS can communicate with the GX device via Modbus TCP. This must first be activated in the GX device and is a mandatory step.

In the GX device, go to Settings → Integrations → Modbus TCP Server and enable Modbus TCP Server.

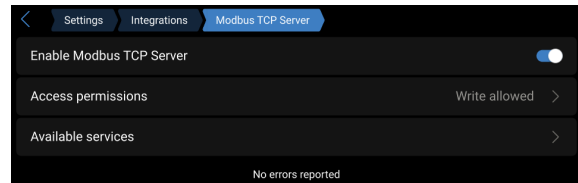


Activate the charging station in the Modbus TCP/UDP menu

This step is only required if it is an EV Charging Station NS that has not already been connected to the GX device **AND** the GX device has firmware version 3.12 or higher.

For devices that were already connected to the GX device before a GX firmware update to Venus OS 3.12, this step is not necessary. These units are activated automatically.

 In the GX device, go to Settings → Integrations → Modbus Devices → Discovered devices and activate the EVCS.



8.3. EV Charging Station setup web interface

After initial setup, set up the EVCS according to your needs. To do this, connect to the web interface and click on the Settings tab for further setting options. The main page options are explained in [The main page \[51\]](#) chapter.

Six subtabs will appear:

1. **Networks** tab: See the [Networks menu \[52\]](#) chapter.
2. **General** tab: Provides setting options for the charger, GX device communication, display, time zone and device name.
 - a. **Charger:** Charger related settings.
 - i. **EV charger position:** Select where the EVCS is positioned in the system. Examples:
 1. If the charging station is on the output of an inverter as one of the main's AC outsources, select Inverter AC out.
 2. If connected to the grid and the EVCS is positioned at the AC input of the grid before the inverter, select Inverter AC in.
 - ii. **EV charger autostart:** If this option is enabled, the EVCS will attempt to start charging after the vehicle is connected.
 - iii. **Contactor active when charged:** Keeps the contactor closed after charging. If, for example, an air conditioner is active in the vehicle, it is powered by AC power and not by the car battery.
 - iv. **Maximum charging current:** 6 - 32A
 - v. **Minimum charging current:** 6 - 32A. Example: A Renault Zoe needs at least 10A.
 - vi. **Power calibration(0.6 - 1.4):** If the displayed power value is not correct, a maximum correction factor of +/- 40% can be applied.
 - vii. **Actual power (kW):** Displays the current power value with which the EV is charged.
 - b. **GX device:** The EV Charging Station NS can be used:
 - i. As a stand alone device in Manual or Scheduled mode. Note that Auto mode requires a GX device and communication between the GX device and EVCS must be enabled.
 - ii. As part of a larger Victron Energy system. When enabling GX device communication, Modbus TCP must be enabled in the GX device (see [Modbus TCP activation \[46\]](#) section) itself to enable communication with the EVCS.
 To avoid errors, the easiest way is to have the pairing between the EVCS and the GX device performed automatically. With the Discover function, the EVCS is able to automatically detect the IP address via the VRM Portal ID.
 - A. **Communication:** Enable or disable communication with a GX device.
 - B. **IP address:** The IP address of your GX device. This will be automatically filled in when you use the Discover feature to pair the EVCS with the GX device.
 - C. **VRM Portal ID:** The VRM Portal ID of your GX device. This will be automatically filled in when you use the Discover feature to pair the EVCS with the GX device.
 - D. **Discover:** Click the Discover button to search for the GX device and pair the EVCS with the GX device. Select the GX device from the list that will pop up; the GX IP address and VRM Portal ID will then be entered automatically.
 - E. **Check:** Press this button to check communication with the GX device. The result is displayed at the top of the page.
 - F. **Start charging at backup battery SoC(%):** The minimum backup battery SoC required to start charging in Auto mode.
 - G. **Stop charging at backup battery SoC, if off-grid(%):** Stops charging when the backup battery SoC falls below this value and there is no grid.
 - H. **Allow battery/grid power for auto mode:** When enabled, auto mode will continue to charge at minimum current when there is insufficient excess solar power. Power is supplied from the grid or battery. This feature is useful to reduce the number of auto-charge enable/disable cycles while charging in auto mode.
 Note that EVCS cannot decide where to get power from (grid or battery), it's up to the inverter.
 - I. **Allow low excess solar power for auto mode:** Allows the EV to be charged with excess solar power plus power from the grid when the excess solar power is not enough to meet the minimum power requirement (6 A, 1380 W). Example: To charge the EV at 6A while there is only 800W of excess solar power, 580W will be drawn from the grid to reach the required 1380W.

- J. **Battery/grid power timeout(min):** The maximum timeout to stop drawing current from the battery/grid. This parameter relates to 'Allow battery/grid power for auto mode'.
 - K. **Overload protection:** The EVCS reads the overload statuses from the inverter. When the inverter reports an overload, the EVCS reduces the charging current to the minimum value and waits about 5 seconds. If the overload is still active, the EVCS will stop charging and will not continue until the overload status is no longer present + some timeout.

If the EVCS detects multiple overload situations within a certain period of time, the charging current will be reduced by 10%.

The same applies to off-grid and grid-tied systems. For grid-tied systems, there is also an "input current limit", and the EVCS will work in the same way as described above if this limit is exceeded.

A warning is displayed on the web interface or in Victron Connect when charging power is reduced or charging is interrupted.
 - L. **Input current limit(A):** In the case of a grid-tied system, it displays the input current limit setting from the inverter, which serves as a threshold for 'Overload protection'.
 - M. **Backup battery emulation:** If the system does not have a backup battery, enabling this option will emulate battery data on the EVCS side. This emulation allows charging to function in automatic mode, as battery data is required.
- c. **EVCS ModbusTCP Server:**
EVCS ModbusTCP server. The address is the same as that of the GX device.
- i. **IP address whitelist state:** Enable or disable the whitelist state.

Note that when the IP address whitelist state is enabled, only the devices from the IP address whitelist table below can communicate with the EVCS.
 - ii. **IP address whitelist table:** Add IP addresses that are allowed to communicate with the EVCS.
- d. **Date & Time:**
- i. **Region:** Select your time zone region.
 - ii. **Time zone/Offset:** Select the time zone. If UTC is selected, it is necessary to enter the correct offset.
Valid time format: +hh:mm or -hh:mm - Example: +02:00 or -01:00
Daylight saving time is processed automatically.
- e. **Others:**
- i. **Energy price per kWh:** Enter the cost per kWh to calculate the session cost saved.
 - ii. **Device name:** Change the name of the EV Charging Station NS, which will then also be updated in the GX device, VictronConnect and the VRM portal.
3. **Scheduler tab:** The schedule required for the scheduled mode is created in this menu.
You can schedule scenes to activate automatically under certain conditions. These conditions include:
- a. **Start time:** Start time of the schedule in hh:mm (24h time format applies)
 - b. **End time:** End time of the schedule in hh:mm (24h time format applies)
 - c. **Current[6-32A]:** Maximum charging current while the schedule is active
 - d. **Repeat:** The time interval at which the schedule is automatically executed again. Possible options:
 - i. **Daily:** Repeats daily
 - ii. **Mon-Fri:** Repeated from Monday to Friday
 - iii. **Weekends:** Repeats every weekend
 - iv. **Custom:** Choose the days of the week you want the scene to repeat
 - e. **State:** State of the scene. If disabled, the schedule for the scene will not run.
- Once a scene has been created, press the Accept button and then the Save button. Note that the scenes are only active when the charging station is in scheduled mode. A currently active scene is highlighted in green in the scheduler and marked active. Scenes can be edited at any time. The same rules apply as described above.
Use the import and export buttons to import/export scenes in .json format.
4. **Light Ring tab:** Customises the ring of lights on the front of the station, around the vehicle socket. A variety of modes to choose from, how long the mode is displayed, the brightness of the lights and their colour.


The coloured ring is to indicate at a glance what the EV Charging Station NS is doing: for example, when the vehicle is fully charged, when there is a low state of charge.

Click the Save button at the bottom of the screen after any change or import/export the Light Ring settings in .json format.

5. **Access** tab: Change the username and password.
6. **Backup & FW** tab: Export or import saved settings, reset the charging station back to factory defaults and update firmware manually.
 - a. **FW Update:** The EVCS firmware can be updated manually via the web interface or remotely via [VRM: Remote firmware update](#).
 - i. **Select firmware file (*.evcsup):** Press the Open button and browse to the location where the provided firmware file is stored, then click Update. This will start the update process. After a successful update, the charging station restarts and the main page is then displayed again. Note that all settings are retained.
 - b. **Backup:** Backup and restore all system settings from/to a .json format file.
 - c. **Reset to factory defaults:** Resetting the device to default values can be done in different ways:
 - i. From the webpage by selecting the Backup & FW menu and then press "Reset to factory defaults" or
 - ii. From inside the unit, by pressing the DEF button for more than 15 seconds. See image below. Note that if the DEF button is pressed less than 15 seconds but more than 5 seconds, it will reset the password only.



The DEF button procedure should only be performed by qualified personnel as this process requires the EV Charging Station NS to be powered. Working under high voltage is very dangerous and can be fatal if used incorrectly. Be sure to avoid touching parts in the area marked in red.

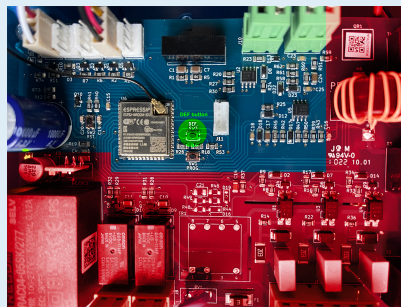

- iii. Via VictronConnect from the product info page.


8.3.1. The main page

The main page of the web interface provides control and monitoring elements for the EV Charging Station NS. These are from top to bottom:

- Charging mode switch: Change the charging mode to manual, auto or scheduled.
- Charging current slider: Adjust the charging current.
- Start/Stop button: Start or stop charging when in manual mode.

Note that after pressing the stop button, first the charging current is reduced to a minimum and only then the contactor opens (with a delay of 2 seconds).

- Session statistics and an animated graphical overview to see the charging progress at a glance.

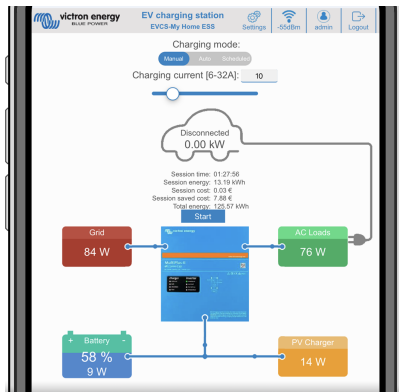


8.3.2. Networks menu

WiFi options and Bluetooth are configured via the network menu of the web interface. Available options are:

1. WiFi

- a. **WiFi mode:** Toggles between access point and station mode.
 - i. **Access point mode:** The unit creates its own WiFi access point. This is either for setting up the unit or in the absence of a separate WiFi network including a GX device. SSID, password, IP address and Netmask are configurable.
 - ii. **Station mode :** Connects the device to a WiFi network that includes other Victron devices like a GX device or VRM. To do this:
 - A. Change the WiFi mode from AP to Station.
 - B. Click the Scan button to manually search for other WiFi networks or manually add a known AP by clicking the Add button. Note the WiFi standards: 802.11 b/g/n (2.4Ghz only).
 - C. Tick the network you wish to connect to and then click Apply.
 - D. In the Password box enter the external WiFi password and click Next.
 - E. In case you need a static IP rather than DHCP, change the IP mode button to Manual and fill in the static IP address, Mask, Gateway and DNS.
 - F. Click Save. Note that when Station mode is enabled, a WiFi strength indicator appears at the top of the web page.

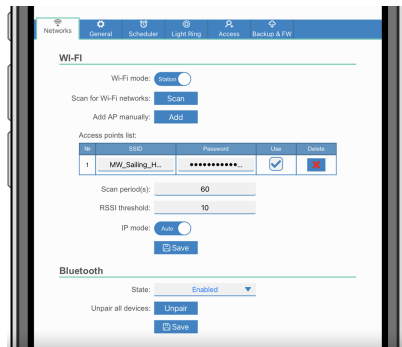

- iii. **Scan period:** If there is only one network to connect to (e.g. a router), the scan period can be set to 0 to avoid unnecessary scanning during an existing connection. If the EVCS connects to more than one network, it is recommended to leave it at the default (60). Note that this is about background network scanning. This parameter has no effect on the manual scan button.
- iv. **RSSI threshold:** An RSSI threshold can be applied to background scanning.

2. Bluetooth

Bluetooth establishes a direct wireless connection between a mobile device and the EV Charging Station NS to control and monitor the EVCS via [VictronConnect](#). The distance is usually a few meters indoors.

The pairing code can be changed via VictronConnect. A factory reset resets the pairing code to factory defaults.

To enable, disable or unpair Bluetooth via the network menu, the following options are available:

- a. **State:** Enables or disables Bluetooth functionality. A change requires pressing the Save button to apply the new status.
- b. **Unpair all devices:** Click to unpair the EVCS from your mobile device(s). Note that this will also restart the charging station and you will still need to remove the pairing from your mobile device's Bluetooth menu.

8.3.3. Access menu

In the Access menu you can choose your own username and password (strongly recommended). Note that you will be prompted to change the password during the initial setup.

To change the username and password:

1. Click into the Username field and type in your own username.
The default username is 'admin' (without apostrophe).
2. Click into the Password field and change the password to a new one with at least 8 characters, containing lower, upper and special characters.
The default password is printed on the sticker inside the unit.
3. Confirm your new password.
4. Click Next.

In case the password is lost, see the [Reset to factory defaults and password recovery \[35\]](#) chapter.